



# DUSTTRAK™

## EXTERNAL PUMP MODULE PUMP REPLACEMENT KIT

### MODELS 8530EP/8533EP

#### EXTERNAL PUMP REPLACEMENT PROCEDURE



SEE MANUAL 6008408 MNL 8540 ENV DUSTTRAK PHOTOMETER FOR ENVIRONMENTAL PUMP REPLACEMENT PROCEDURE

Thank you for purchasing a TSI® DustTrak™ Model 8530EP/8533EP dust monitor. This guide will help you quickly replace the **Thomas Rotary Vane Pump Model #BL-G 085 M** in the DustTrak™ External Pump Module that comes with the DustTrak™ Model 8530EP/8533EP.

More detailed information is in the user manual provided with the instrument in the carry case. Please refer to the manual if you have questions on the operation of your dust monitor.

## Setup Instructions


The DustTrak External Pump Module has a user-replaceable long-life rotary vane pump. To replace the pump in the External Pump Module, carefully follow the detailed procedures in this document. The following parts come with the pump replacement kit:

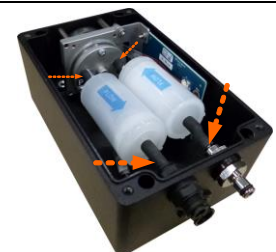
Qty.	Part Number	Description	Item
1	854043	DustTrak External Pump Replacement Kit	
1	6006603	DustTrak External Pump Module Pump Replacement Kit Models 8530EP / 8533EP Pump Replacement Procedure	






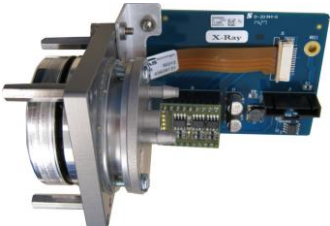


The following tools are required but **NOT included** in the kit:

Qty.	Part Number	Description	Item
1	N/A	2 mm HEX Ball Driver	
1	N/A	2.5 mm HEX Ball Driver	
1	N/A	3/16" Wrench	
1	N/A	#2 Phillips Head Screwdriver	




## Disassembly

1. Observe ESD precautions. 
2. Fully loosen four (4) screws on module cover. Screws **DO NOT** need to be removed from cover. Set cover aside.
3. Disconnect tubing from ports on pump.



<p>4. Lift filters out of way and disconnect cable from PC board. (Remove and replace filters if needed.)</p>		<p>5. Connect cable to PC board.</p>	
<p>5. Remove four (4) screws that attach pump to box. Set screws aside.</p>		<p>6. Install four (4) screws to secure pump.</p>	
<p>6. Remove pump assembly from case.</p> 		<p>7. Connect filter tubing to pump.</p>	
<p>8. Install cover.</p>			

## Reassembly

<p>1. Observe ESD precautions. </p> <p>2. Remove pump assembly from packaging.</p> <p>3. Verify ribbon cable is connected.</p>	
<p>4. Place pump assembly in case.</p>	

### NOTE

The external pump is completely powered by the DustTrak™ monitor. **DO NOT** attempt to power the pump module using an external power source.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website [www.tsi.com](http://www.tsi.com) for more information.

USA Tel: +1 800 680 1220  
 UK Tel: +44 149 4 459200  
 France Tel: +33 1 41 19 21 99  
 Germany Tel: +49 241 523030

India Tel: +91 80 67877200  
 China Tel: +86 10 8219 7688  
 Singapore Tel: +65 6595 6388

