


TSI SidePak™ SP330/350 Quick Reference Card

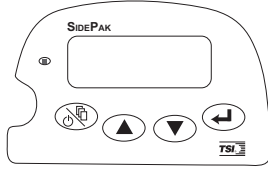

- Press to power ON/OFF.
- Press and hold for 3 seconds to power off.
- Press to return to previous menu or screen.
- to scroll through menu selections or change settings.

• to select/enter value.

Tamper Protection:
Press and hold and to lock or unlock keypad.

Display Reading

Model SP330
S/N xxxxxx

Version X
Battery xx%

ELAPSED
TIME xxx min.

READY MODE
Enter = Start

Auto Cycle

To start pump

Flow Mode

ELAPSED
Time xxx min.

BATT xxx min.

Auto Cycle

To enter setup menu

To Scroll through menu

Set up Menu

Flow Set PNT

Clear Data

Reset All

Set Program

Run Program

"ENTER = CLEAR DATA"
 to execute clear Data Function

Pump will start

- Let pump run 2 min.
- Connect Calibrator
- Use keys to increase or decrease flow rate to desired reading on calibrator.
- Press to accept new flow rate.
- Instrument will display new estimated run time and return to ready mode.

"ENTER = RESET FLOW"
to execute reset all functions

TOTAL TIME ♦♦
xxx min. (5-999 min.)

- Use to select run time.
- Press to execute new run time

Delay ♦♦
xxx Min (1-999 min.)

- Use to select delay start time
- Instrument returns to ready mode

• Pump will turn on and display

PROGRAM MODE
Batt xxx min.

TOTAL SAMPLE TIME
x min.

REMAINING Time
xxx min.

OR

• Pump will display

PUMP START
IN xxx min.

• If programmed to start after a delay



TRUST. SCIENCE. INNOVATION.