


MODEL 8630 PRESSURA™ SECOND PRESSURE SENSOR

INSTALLATION INSTRUCTIONS

Installing with the Model 8630 PresSura Room Pressure Monitor

The purpose of these instructions is to guide the installer through the installation of the optional TSI second sensor to the premium Model 8630 PRESSURA™ Room Pressure Monitor. The complete Model 8630 PRESSURA™ Room Pressure Monitor installation is covered in the *Model 8630 PRESSURA™ Room Pressure Monitor Installation Instructions*.

The second sensor must be wired per the figure below. Wire should be 24 AWG or larger (supplied). Any modification to the wiring may damage the sensor and Digital Interface Module.

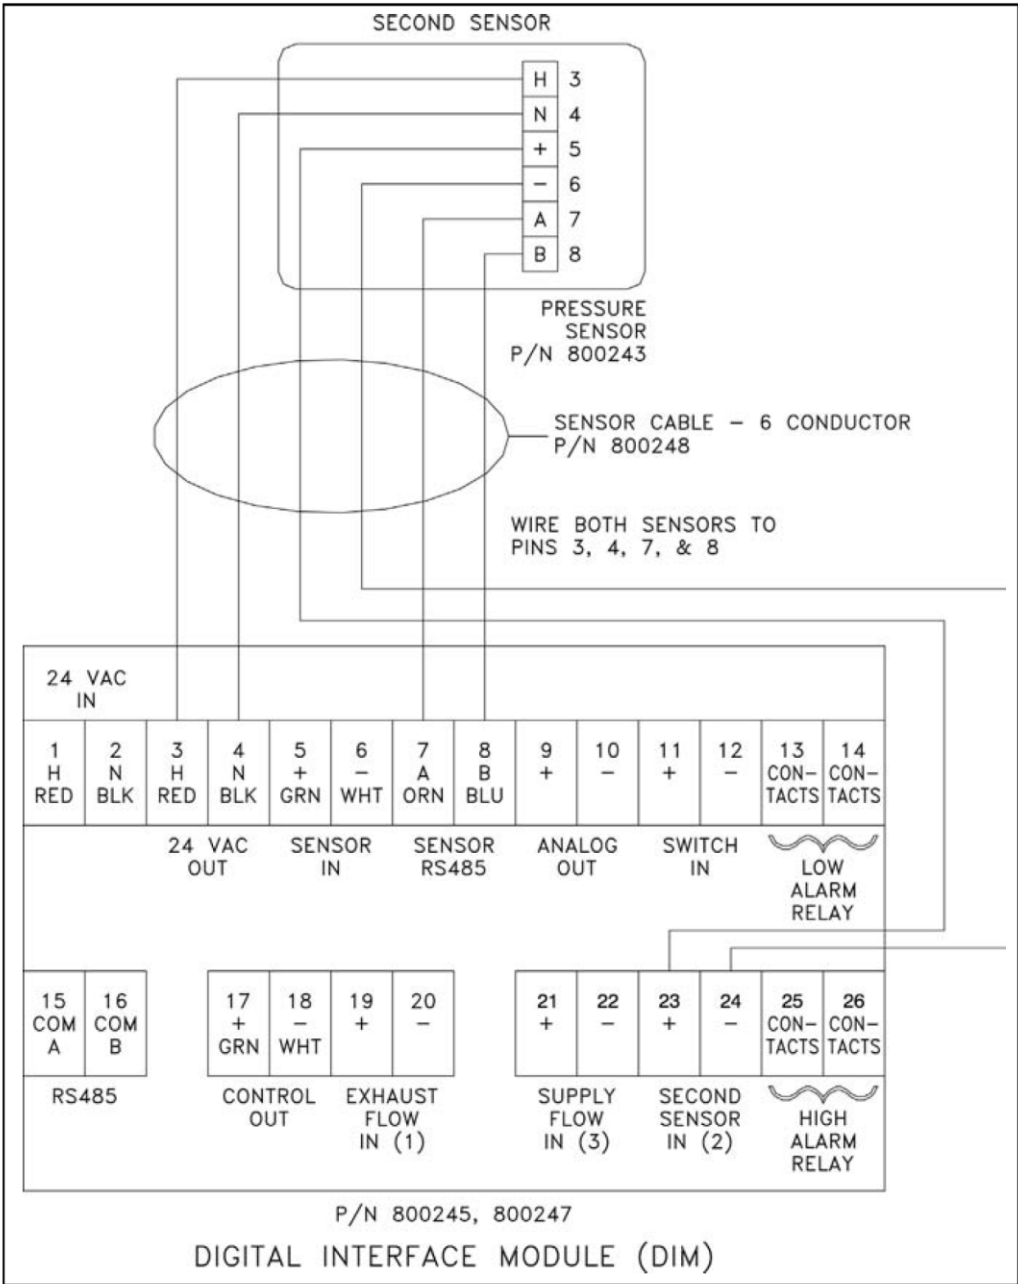

This concludes installation of the second sensor. If you need assistance installing the Digital Interface Module, see the Model 8630 PRESSURA™ Room Pressure Monitor Installation Instructions. If you need further assistance, contact your local representative or TSI at 651-490-2811 or 1-800-874-2811



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA	Tel: +1 800 874 2811	India	Tel: +91 80 67877200
UK	Tel: +44 149 4 459200	China	Tel: +86 10 8251 6588
France	Tel: +33 491 11 87 64	Singapore	Tel: +65 6595 6388
Germany	Tel: +49 241 523030		