

PortaCount™ Respirator Fit Tester



Models 8040 and 8048

Operation/User Manual

P/N 6010633, Revision H
December 2025



Start Seeing the Benefits of Registering Today!

Thank you for your TSI® instrument purchase. Occasionally, TSI® releases information on software updates, product enhancements and new products. By registering your instrument, TSI® will be able to send this important information to you.

<http://register.tsi.com>

As part of the registration process, you will be asked for your comments on TSI products and services. TSI's customer feedback program gives customers like you a way to tell us how we are doing.

Contents

| | |
|--|------------|
| Warranty | iii |
| Safety | v |
| Description of Labels and Markings | v |
| RoHS | vi |
| CE | vi |
| Chemical Safety | vii |
| Laser Safety | viii |
| CHAPTER 1 Introduction and Overview | 1 |
| Why Fit Test | 1 |
| Preparations for Fit Testing | 2 |
| Identifying Parts | 2 |
| Reordering Supplies | 7 |
| Install FitPro™ Ultra Fit Test Software | 7 |
| Access and Install FitPro™ Ultra Fit Test Software | 8 |
| CHAPTER 2 Prepare the PortaCount™ Fit Tester for Operation .. | 9 |
| Install the Twin Tube Assembly | 9 |
| Prepare the Alcohol Cartridge | 10 |
| Connect the PortaCount™ Fit Tester | 13 |
| Supply Power to the PortaCount™ Fit Tester | 14 |
| Connect to FitPro™ Ultra Fit Test Software | 15 |
| Connect Wirelessly (<i>optional</i>) | 15 |
| Using a Particle Generator (<i>optional</i>) | 17 |
| CHAPTER 3 FitPro™ Ultra Fit Test Software Operation | 19 |
| The Main Menu | 19 |
| Fit Test History Feature and Multi-Respirator Fit Test Card Feature | 29 |
| CHAPTER 4 Daily Checks | 33 |
| Daily Check History Feature | 35 |
| CHAPTER 5 Real-Time FitCheck™ Mode | 37 |
| Real-Time Training | 37 |
| Concentration Check | 39 |
| CHAPTER 6 Fit Testing | 41 |
| Precautions for Fit Testing | 41 |
| About Respirators and Fit Testing | 42 |
| Probed Test Respirators | 42 |

| | |
|---|-----------|
| Probes for Filtering-Facepiece (Disposable) Respirators..... | 44 |
| Inserting a Test Probe in a Disposable Respirator with the TSI® Model 8025-N95 Probe Kit | 44 |
| Conducting a Fit Test..... | 48 |
| Record/Print Results..... | 55 |
| CHAPTER 7 Manage Data..... | 57 |
| Import/Export from CSV | 57 |
| Multiple Database Support | 60 |
| Custom Fields..... | 62 |
| CHAPTER 8 Preventive Maintenance, Service, and Troubleshooting | 65 |
| Maintenance | 65 |
| Troubleshooting | 71 |
| APPENDIX A Specifications..... | 79 |
| Model 8040 PortaCount™ Respirator Fit Tester..... | 79 |
| Model 8048 PortaCount™ Respirator Fit Tester..... | 81 |
| APPENDIX B The Rainbow Passage | 85 |

Warranty

Copyright©

TSI Incorporated / 2017-2025 / All rights reserved.

Part Number

6010633 / Revision H / December 2025

Address

TSI Incorporated / 500 Cardigan Road / Shoreview, MN 55126 / USA

Fax No.

(651) 490-3824

LIMITATION OF WARRANTY AND LIABILITY (effective May 2024)

(For country-specific terms and conditions outside of the USA, please visit www.tsi.com.)

Seller warrants the goods, excluding software, sold hereunder, under normal use and service as described in the operator's manual (version published at the time of sale), to be free from defects in workmanship and material for the longer period of either **24 months or the length of time specified in the operator's manual/warranty statement** provided with the goods or made available electronically (version published at the time of sale), from the date of shipment to the customer. This warranty period is inclusive of any statutory warranty. **This limited warranty is subject to the following exclusions and exceptions:**

- a. Hot-wire or hot-film sensors used with research anemometers, and certain other components when indicated in specifications, are warranted for 90 days from the date of shipment;
- b. Pumps are warranted for hours of operation as set forth in product or operator's manuals (versions published at the time of sale);
- c. Parts repaired or replaced as a result of repair services are warranted to be free from defects in workmanship and material, under normal use, for 90 days from the date of shipment;
- d. Seller does not provide any warranty on finished goods manufactured by others or on any fuses, batteries or other consumable materials. Only the original manufacturer's warranty applies;
- e. This warranty does not cover calibration requirements, and Seller warrants only that the goods are properly calibrated at the time of its manufacture. Goods returned for calibration are not covered by this warranty;
- f. This warranty is **VOID** if the goods are opened by anyone other than a factory authorized service center with the one exception where requirements set forth in the operator's manual (version published at the time of sale) allow an operator to replace consumables or perform recommended cleaning;
- g. This warranty is **VOID** if the goods have been misused, neglected, subjected to accidental or intentional damage, or is not properly installed, maintained, or cleaned according to the requirements of the operator's manual (version published at the time of sale). Unless specifically authorized in a separate writing by Seller, Seller makes no warranty with respect to, and shall have no liability in connection with, goods which are incorporated into other products or equipment, or which are modified by any person other than Seller;
- h. New parts or components purchased are warranted to be free from defects in workmanship and material, under normal use, for 90 days from the date of shipment.

The foregoing is **IN LIEU OF** all other warranties and is subject to the **LIMITATIONS** stated herein. **NO OTHER EXPRESS OR IMPLIED WARRANTY OF FITNESS FOR PARTICULAR PURPOSE OR MERCHANTABILITY IS MADE. WITH RESPECT TO**

SELLER'S BREACH OF THE IMPLIED WARRANTY AGAINST INFRINGEMENT, SAID WARRANTY IS LIMITED TO CLAIMS OF DIRECT INFRINGEMENT AND EXCLUDES CLAIMS OF CONTRIBUTORY OR INDUCED INFRINGEMENTS. BUYER'S EXCLUSIVE REMEDY SHALL BE THE RETURN OF THE PURCHASE PRICE DISCOUNTED FOR REASONABLE WEAR AND TEAR OR AT SELLER'S OPTION REPLACEMENT OF THE GOODS WITH NON-INFRINGEMENTS.

TO THE EXTENT PERMITTED BY LAW, THE EXCLUSIVE REMEDY OF THE USER OR BUYER, AND THE LIMIT OF SELLER'S LIABILITY FOR ANY AND ALL LOSSES, INJURIES, OR DAMAGES CONCERNING THE GOODS (INCLUDING CLAIMS BASED ON CONTRACT, NEGLIGENCE, TORT, STRICT LIABILITY OR OTHERWISE) SHALL BE THE RETURN OF GOODS TO SELLER AND THE REFUND OF THE PURCHASE PRICE, OR, AT THE OPTION OF SELLER, THE REPAIR OR REPLACEMENT OF THE GOODS. IN THE CASE OF SOFTWARE, SELLER WILL REPAIR OR REPLACE DEFECTIVE SOFTWARE OR IF UNABLE TO DO SO, WILL REFUND THE PURCHASE PRICE OF THE SOFTWARE. **IN NO EVENT SHALL SELLER BE LIABLE FOR LOST PROFITS, BUSINESS INTERRUPTION, OR ANY SPECIAL, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES.** SELLER SHALL NOT BE RESPONSIBLE FOR INSTALLATION, DISMANTLING OR REINSTALLATION COSTS OR CHARGES. No Action, regardless of form, may be brought against Seller more than 12 months after a cause of action has accrued. The goods returned under warranty to Seller's factory shall be at Buyer's risk of loss, and will be returned, if at all, at Seller's risk of loss.

Buyer and all users are deemed to have accepted this LIMITATION OF WARRANTY AND LIABILITY, which contains the complete and exclusive limited warranty of Seller. This LIMITATION OF WARRANTY AND LIABILITY may not be amended, modified or its terms waived, except by writing signed by an Officer of Seller.

Disclaimer: The measurement provided by the **PortaCount™** Respirator Fit Tester is an assessment of respirator fit during a fit test only. Respirator fit at other times will vary. The fit factor value is not intended for use in calculating an individual's actual exposure to hazardous substances.

Trademarks

TSI and TSI logo are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.

Wi-Fi is a registered trademark of the Wi-Fi Alliance.

Microsoft is a registered trademark of Microsoft Corporation.

Service Policy

Knowing that inoperative or defective instruments are as detrimental to TSI as they are to our customers, our service policy is designed to give prompt attention to any problems. If any malfunction is discovered, please contact your nearest sales office or representative, or call TSI's Customer Service department at (800) 680-1220 (USA) or (001 651) 490-2860 (International) or visit www.tsi.com.

Safety

This section provides instructions to ensure safe and proper operation of the **PortaCount™** Respirator Fit Tester Models 8040 and 8048.

Description of Labels and Markings

This section acquaints you with the advisory and identification labels on the instrument and used in this manual to reinforce the safety features built into the design of the instrument. It also identifies instrument markings.

Warning



WARNING







WARNING means that unsafe use of the instrument could result in serious injury to you or cause irrevocable damage to the instrument. Follow the procedures prescribed in this manual to use the instrument safely.

Caution



CAUTION

CAUTION means *be careful*. It means if you do not follow the procedures prescribed in this manual you may do something that might result in equipment damage, or you might have to take something apart and start over again. It also indicates that important information about the operation and maintenance of this instrument is included.

| Serial Number Label | WEEE Marking | Wi-Fi® Indicator | Status Indicator | Safety Label |
|--|---|---|---|---|
| <p>PortaCount Model 8048 SN 80481815001 MFD April 2018 CLASS 1 LASER PRODUCT COMPLIES WITH 21 CFR 1040.10 Laser Notice 50 EN IEC 61010 - 1:2010 IEC 60925 - 1:2014 TSI Inc. www.tsi.com 500 Cardigan Road Shoreview, MN 55126 U.S.A. Made in USA</p>  <p>TSI CE </p> <p>R-REM-tSi-PortaCount804</p> |  <p>Indicates item is non-disposable and must be recycled.</p> |  |  |  |

RoHS

PortaCount™ Respirator Fit Tester Models 8040 and 8048 instruments meet the intent for RoHS Directive 2011/65/EU.

CE

PortaCount™ Respirator Fit Tester Models 8040 and 8048 instruments meet the intent of standard IEC61326-1:2013

Accessories 804004 and 804005 meet Criteria C for Standard 61326-1:2014 Method IEC61000-4-5:2014

TUV-SUD Safety Mark, Certificate U8 18 04 41468 023, issued 2018-4-20

PortaCount™ issued a KC-ID string on 2018-04-30: R-REM-tSi-PortaCount804

Both **PortaCount** models; 8040 & 8048 are designated with the same KC-ID



WARNING

These instruments must be used in the manner described in this manual. Failure to follow all of the procedures described in this manual can result in serious injury to you or can cause irrevocable damage to the instrument. There are no user-serviceable parts inside the instrument. Refer all repairs to a qualified factory-authorized technician.

Chemical Safety



WARNING

FLAMMABLE. HARMFUL IF SWALLOWED OR INHALED. CAUSES IRRITATION.

May be poisonous if inhaled or absorbed through skin. Keep away from heat, sparks and flame. Avoid Contact with eyes, skin and clothing. Avoid breathing vapor. Keep in tightly closed container. Use with adequate ventilation. Wash thoroughly after handling.

PRECAUTIONARY STATEMENT. Ingestion may cause nausea, vomiting, headaches, dizziness, or gastrointestinal irritation.

FIRST AID PROCEDURES. If inhaled, remove to fresh air. If not breathing, give artificial respiration. If breathing is difficult, give oxygen. In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. If swallowed, and victim is conscious, have victim drink water or milk.

The alcohol used with these instruments is 99.5% pure or greater purity reagent grade isopropyl alcohol. It must be stored, cared for and disposed of properly. The use of other grades/types of alcohol will damage the instrument.

Use these instruments in a clean area.

- **DO NOT** use in areas with corrosive or acidic atmospheres.

Laser Safety

The **PortaCount™** Models 8040 and 8048 are Class 1 laser-based instruments. During normal operation, the user will not be exposed to laser radiation. However, certain precautions must be taken or you may expose yourself to hazardous radiation in the form of intense, focused visible light. Exposure to this light can cause blindness.



DANGER

DO NOT remove parts from the instrument unless specifically told to do so in this manual.

DO NOT remove the instrument housings or covers while power is supplied to the instrument.



WARNING

The use of controls, adjustments, or procedures other than those specified in this manual may result in exposure to hazardous optical radiation.



A급 기기 (업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.

Introduction and Overview

This manual describes both the **PortaCount™** Model 8040 and 8048 Respirator Fit Tester Hardware and **FitPro™** Ultra Fit Test Software.

The Model 8040 is designed to measure fit factors of respirators with a filter efficiency of 99% or greater. The Model 8048 includes **N95-Companion™** Technology, which can fit test any tight-fitting respirators and all filtering facepiece air-purifying respirators including: NIOSH Series 100/99/95; and FFP3/FFP2/FFP1 disposables.

Why Fit Test

There are two primary reasons for respirator fit testing:

| | |
|---------------------------------|---|
| Verification of Training | After the individual has received respirator training, a fit test checks that the person has learned how to properly put on and wear a respirator without assistance. |
| Sizing | It is important to make sure that the individual is issued a properly sized respirator that is capable of providing protection when worn properly. |


Preparations for Fit Testing







| | |
|------------------------------------|--|
| <p>Training the Trainer</p> | <p>The person conducting the fit test must have a clear understanding of respiratory protection, respirators, and fit testing to be effective. Anyone can master the operation of the PortaCount™ Respirator Fit Tester simply by studying this manual, but the background knowledge required to proficiently fit test cannot be obtained here. Consider attending a seminar on fit testing provided by TSI® PortaCount™ Academy or from various consultants. Contact TSI® for PortaCount™ Academy Scheduled training events.</p> |
| <p>Respirator Training</p> | <p>Respirator training is critical for any respiratory protection program. All employees who wear respirators must be taught how and why they are used. This training should be done prior to the fit test, not during the fit test. Consult the regulations or standards that pertain to your industry for information on training requirements.</p> |






Identifying Parts

The following items are included with **PortaCount™** Respirator Fit Testers. If any are missing or damaged, please notify TSI® immediately.


Use the photographs below to identify connectors, parts, and accessories of the **PortaCount™** Fit Tester. You need to be familiar with these items when following the instructions in this manual.

| Description | For use with | Reference Picture |
|---|---------------------|---|
| <p>Respirator Fit Tester Model 8040/8048</p> | <p>8040 or 8048</p> |  |

| Description | For use with | Reference Picture |
|---|----------------------|---|
| <p>Alcohol Cartridge; a porous wick inside is soaked with alcohol.</p> | <p>8040 and 8048</p> |  |
| <p>Alcohol Fill Capsule; holds the isopropyl alcohol consumed by the PortaCount™ Fit Tester.</p> | <p>8040 and 8048</p> |  |
| <p>Storage Cap; covers either the cartridge cavity of the PortaCount™ Fit Tester or the alcohol fill capsule.</p> | <p>8040 and 8048</p> |  |
| <p>Zero Check Filter – 2 pieces; provides for the zero check and max fit factor check on the PortaCount™ Fit Tester to make sure it is working properly. A spare filter is also provided.</p> | <p>8040 and 8048</p> |  |
| <p>Spare Alcohol Wicks – 2 pieces.</p> | <p>8040 and 8048</p> |  |
| <p>5 ft. (1.5 m) Twin Tube Assembly; consists of a pair of tubes: the clear sample tube and the blue ambient tube.</p> | <p>8040 and 8048</p> |  |

| Description | For use with | Reference Picture |
|--|----------------------|---|
| <p>Spare Sampling Port Inlet Screens; used to help keep the PortaCount™ Fit Tester internal flow path clean by capturing large or fibrous particles.</p> | <p>8040 and 8048</p> |  |
| <p>1/8 to 1/4 Tube Adapter; used to connect the sample tube to a respirator sample fitting (or probe) that has a 1/4 inch (6.3 mm) fitting.</p> | <p>8040 and 8048</p> |  |
| <p>1/8 to 3/16 Tube Adapter; used to connect the sample tube to a respirator sample fitting (or probe) that has a 3/16-inch (4.8 mm) fitting.</p> | <p>8040 and 8048</p> |  |
| <p>AC Adapter; plugs into the external power connector on the PortaCount™ Fit Tester and an AC wall outlet.</p> | <p>8040 and 8048</p> |  |
| <p>30 ml Isopropyl Alcohol Bottles 16 pieces (480 ml total).</p> | <p>8040 and 8048</p> |  |

| Description | For use with | Reference Picture |
|--|----------------------|---|
| <p>Quick Start Guide; for helping you get started quickly.</p> | <p>8040 and 8048</p> |  |
| <p>Carrying Case; provides protection and convenience. The case is designed to hold the PortaCount™ Fit tester and standard accessories.</p> | <p>8040 and 8048</p> |  |
| <p>USB Cable: used to connect the PortaCount™ Fit Tester to a tablet or computer.</p> | <p>8040 and 8048</p> |  |
| <p>Probe Assembly Tool: used to help assemble probes.</p> | <p>8048</p> |  |
| <p>Probe Kit (100 pieces).</p> | <p>8048</p> |  |
| <p>Neck Strap; to support twin tube when fit testing filtering facepiece respirators.</p> | <p>8048</p> |  |

| Description | For use with | Reference Picture |
|--|--------------|--|
| <p>Model 8026 Particle Generator; to supplement the ambient particle concentration in the fit testing area.</p> | 8048 |  |
| <p>Package of 100 Salt Tablets (100 mg); for use with Model 8026 Particle Generator.</p> | 8048 |  |
| <p>Power Cord: for use with Model 8026 Particle Generator.</p> | 8048 |  |
| <p>Extra Lid: for use with Model 8026 Particle Generator.</p> | 8048 |  |
| <p>Durable Carrying Case; for use with Model 8026 Particle Generator.</p> | 8048 |  |

Reordering Supplies

TSI® part numbers for consumable supplies, accessories, and miscellaneous replacement parts are:

| Model/Part No. | Description |
|----------------|---|
| 8016 | Box of 16, 30 ml Bottles of Isopropyl Alcohol (480 ml total) |
| 8033 | Box of 10 Alcohol Wicks |
| 803X-ZFLTR | Zero Check Filter |
| 8017 | Sampling Hose Kit with 3 Twin Tube Assemblies and 10 each 3/16 in. and 1/4 in. Tube Adapters. |
| 800197 | Twin Tube Assembly (Quantity 1) |
| 8034 | AC Adapter for PortaCount™ Fit Tester (voltage sensing) |
| 6006456 | PortaCount™ Fit Tester Quick Start Guide |
| 8032 | Alcohol Cartridge and Fill Capsule Kit for PortaCount™ Fit Tester |
| 8032-FC | Alcohol Fill Capsule with Storage Cap |
| 8032-SC | Storage Cap |
| 8032-CT | Alcohol Cartridge with Wick |
| WF-USBD | Wi-Fi® USB Dongle |
| 803X-CRDFRM | Punch-out Card Forms (250 sheets) |
| 8025-N95 | Filtering Facepiece Probe Kit |
| 804004 | USB Hub, 4 USB-A Ports |
| 804005 | USB-A(M) to USB-A(F) Ext Cable, 6 ft/2 m |

Install FitPro™ Ultra Fit Test Software

The **PortaCount™** Fit Tester is controlled with **FitPro™** Ultra Fit Test Software running on a tablet or a personal computer.

The minimum requirements for a tablet or personal computer are:

Tablet Requirements

- Microsoft® Windows® 10 operating system.
- 1 free USB port.

Personal Computer Requirements

- Microsoft® Windows® 7 (32- and 64-bit) or Windows® 10 (32- and 64-bit) operating systems.
- Microsoft.Net version 4 (installation software will install Microsoft.Net if necessary)
- ≥1 GHz processor.
- ≥1280 x 800 screen resolution.
- 1 free USB port.
- 500 MB free storage on hard drive

NOTICE

An internet connection is required to install **FitPro™** Ultra software and Microsoft.Net.

Access and Install FitPro™ Ultra Fit Test Software


Use your tablet or computer to access the TSI® software and firmware wizard at: <https://www.tsi.com/support/tsi-software-and-firmware-wizard/>. Follow the instructions to download the software. Then run the **FitPro™** Ultra Fit Test Software installer. For questions refer to detailed software installation instruction sheet included in your instrument case. Or call Customer Support at 1-800-680-1220 (USA), (651) 490-2860, or 001 651 490-2860 (International) or visit www.tsi.com/support.

To start the **FitPro™** Ultra Software, double-click on the icon. The software will present default configuration options that can be changed later if needed. See [Chapter 2](#) to connect the instrument and begin fit testing.

Prepare the PortaCount™ Fit Tester for Operation

Install the Twin Tube Assembly

The **PortaCount™** Fit Tester has two inlet fittings, one colored blue and one colored silver. Connect the twin tube assembly to the corresponding inlet fittings; the blue tube to the blue fitting and the clear tube to the silver fitting. The clear tube samples particles inside the respirator. Ambient particles outside the respirator are sampled through the blue tube.

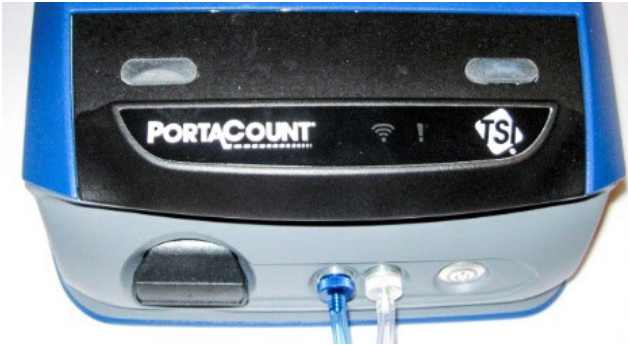

NOTICE

The twin tube **MUST NOT** be lengthened except for the few inches added by a tube adapter. **NEVER** split the ambient and respirator tubes, they must remain together and the two sample tubes must be nearly the same length for accurate fit testing.

Prepare the Alcohol Cartridge

The wick must be saturated with isopropyl alcohol for the **PortaCount™** Fit Tester to make particle measurements. Fill the alcohol cartridge as follows.



WARNING

FLAMMABLE. HARMFUL IF SWALLOWED OR INHALED. CAUSES IRRITATION. May be poisonous if inhaled or absorbed through skin. Keep away from heat, sparks and flame. Avoid Contact with eyes, skin and clothing. Avoid breathing vapor. Keep in tightly closed container. Use with adequate ventilation. Wash thoroughly after handling.

PRECAUTIONARY STATEMENT. Ingestion may cause nausea, vomiting, headaches, dizziness, or gastrointestinal irritation.

FIRST AID PROCEDURES. If inhaled, remove to fresh air. If not breathing, give artificial respiration. If breathing is difficult, give oxygen. In case of contact, immediately flush eyes or skin with plenty of water for at least 15 minutes. If swallowed, and victim is conscious, have victim drink water or milk.



NOTICE

Any dirt or debris that gets into the **PortaCount™** Fit Tester can plug the small internal nozzle and prevent operation.

- **DO NOT** allow the black part of the alcohol cartridge to make contact with any surface that may be dirty. Keep the storage cap and alcohol cartridge clean.
- The alcohol cartridge is inserted into the cartridge cavity during use. It is critically important to keep dirt and lint out of the cartridge cavity.
- Cover the cartridge cavity with the storage cap (see Step 10) when the instrument is not being used and when transporting the **PortaCount™** Fit Tester.

1. Make certain the **PortaCount™** Fit Tester is turned off.
2. Remove the alcohol cartridge from the **PortaCount™** Fit Tester by twisting it counter-clockwise.

3. Open the alcohol fill capsule by twisting the storage cap off (counter-clockwise).
4. Set the storage cap and alcohol cartridge down on a clean surface to prevent contamination.



5. Open a 30-ml bottle of alcohol. Invert the bottle and insert the nozzle end into the alcohol fill capsule as far as possible to make certain alcohol is not inadvertently sprayed anywhere except into the capsule.
6. Squeeze alcohol into the alcohol fill capsule. When 30 ml is added to an empty alcohol fill capsule, the alcohol level will rise to the fill-line when the wick is inserted.
7. Recap the empty alcohol bottle immediately.



8. Make certain the alcohol cartridge is clean and insert the alcohol cartridge into the alcohol fill capsule. Turn the capsule clockwise until it locks in place.
9. Set the alcohol fill capsule down and wait at least two minutes while the alcohol wick inside the alcohol cartridge soaks up the maximum amount of alcohol.
10. Remove the alcohol cartridge from the capsule and gently shake it to allow excess alcohol to drip back into the alcohol fill capsule. Stop when excess alcohol is no longer dripping; it is not necessary to wait until the outside surface of the alcohol cartridge is dry.
11. Insert the alcohol cartridge into the cartridge cavity of the **PortaCount™** Fit Tester. It should slide in with little effort; **DO NOT** force it. As you approach full insertion, firmly twist the alcohol cartridge clockwise until it locks into position.



- Recap the alcohol fill capsule with the storage cap to prevent absorption of moisture from ambient air and the escape of alcohol vapors.
- The **PortaCount™** Fit Tester is now ready to be turned on.
- When shutting down for the day, return the alcohol cartridge to the alcohol fill capsule and put the storage cap back into the cartridge cavity.

Connect the PortaCount™ Fit Tester

Connect the PortaCount™ Fit Tester to a Tablet or Computer via the USB Cable Provided


- Connect the “USB-A” plug connection to the corresponding USB port on the tablet or computer.
- Connect the “USB-C” plug connection to the corresponding USB port on the back side of the **PortaCount™** Fit Tester.



NOTICE

DO NOT unplug the USB cable while the system is running. This can cause the **PortaCount™** Fit Tester to temporarily lose communication with **FitPro™** Ultra Fit Test Software. If communication is broken, it can be restored by cycling power to the **PortaCount™** Fit Tester. **DO NOT** connect to Ethernet port on the back of the **PortaCount™** Fit Tester. It is for factory use only.

Supply Power to the PortaCount™ Fit Tester

Using the AC connector provided, plug the **PortaCount™** Fit Tester into an AC power source. Power on the instrument with the on/off button  on the front. It will light up to indicate that power is on. To power the instrument off, press and hold the power button for 1 second. It will take up to 10 seconds to power down after that.



NOTICE



Use only the AC adapter provided (TSI® part number 8034) and **DO NOT** substitute another adapter **as this will cause damage to the PortaCount™ Fit Tester.**




NOTICE

DO NOT block the fan or exhaust port on the back of the instrument when it is turned on. Open air flow to the back is important to the accuracy of the measurement.

When first powered on, the instrument begins a one-minute warm up period. The LED on the power button will strobe during the warm up period. The **PortaCount™** Fit Tester will connect to **FitPro™** Ultra Software after the warm up period is complete. The following indicators will appear.

|  | |  | |
|--|----------------------------------|--|-------------------------------------|
| Wireless connectivity | | Status | |
| On | Wi-Fi® capability is enabled | Off | Status is OK |
| Off | Wi-Fi® capability is not enabled | Red | Factory service is recommended |
| | | Yellow | Replenish alcohol in wick cartridge |

Connect to FitPro™ Ultra Fit Test Software

Click the **FitPro™** Ultra icon  on the desktop to start the **FitPro™** Ultra Fit Test Software. An operator login screen will be displayed requesting operator identification. Enter operator initials, name, or ID number then press **Continue**.

The software will find the **PortaCount™** Fit Tester(s) connected by USB or Wi-Fi®, identifying each instrument by serial number and provide an option to connect to it. By default, the name shown will match the serial number of the instrument unless a new name has been entered from the **PortaCount™** General Settings menu. Press **Connect** to establish a connection with the **PortaCount™** Fit Tester.


Once the instrument is connected to the **FitPro™** Ultra Software, the **PortaCount™** Fit Tester is ready to conduct daily checks, fit tests, real-time fit checks, access people/respirator/fit test information, etc. These are described in detail in [Chapters 3 to 6](#).


Connect Wirelessly (*optional*)


PortaCount™ Model 8040 and 8048 Respirator Fit Testers can be configured to communicate wirelessly with **FitPro™** Ultra Fit Test Software. **FitPro™** Ultra Software must be running on a computer or tablet equipped with Wi-Fi® capability and the two devices must be within Wi-Fi® range of one another.

A Wi-Fi® USB-A dongle is required to configure the **PortaCount™** Fit Tester for wireless communication. The Wi-Fi® USB-A dongle must be compliant with local country regulations. TSI® sells Wi-Fi® USB-A dongle as part number WF-USBD. This part is compliant in many countries including the United States and Canada.

To begin the configuration process for the first time, power down the **PortaCount™** Fit Tester and insert the Wi-Fi® dongle into either of the two USB-A ports on the back of the **PortaCount™** Fit Tester.

Power on the **PortaCount™** Fit Tester and wait two (2) minutes. The Wi-Fi® indicator  will illuminate while you wait. From the tablet or computer, access the list of available wireless network connections. The **PortaCount™** Fit Tester will appear in this list identified by its serial number. For instance, in the image below the name of **PortaCount™** Fit Tester connection is **tsi-8048173604**. Make note of the wireless network connection name for later use.

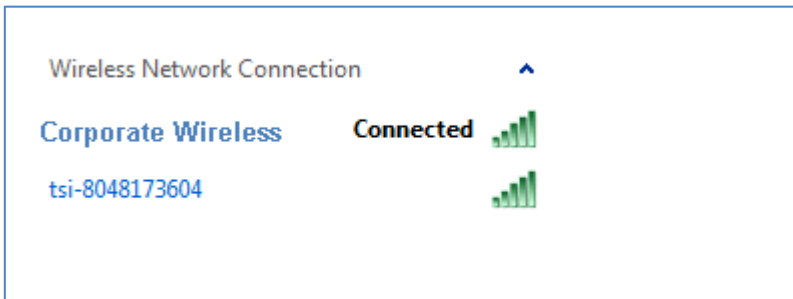

If the computer or tablet is connected to a wireless network, disconnect from it and connect to the **PortaCount™** Fit Tester. You will be prompted for a network security ID. By default this is the same as the wireless network connection name. Once these steps are complete, launch the **FitPro™** Ultra Fit Test Software and the **PortaCount™** Fit Tester will be listed on the Connect screen with a Wi-Fi® connection type .

Options for altering the connection name and security ID are described in [Chapter 3 - PortaCount Fit Tester Menu, PortaCount Settings.](#)

NOTICE

When you change your wireless connection to access the **PortaCount™** Fit Tester you will not have access to other network connections. This will limit functionality such as e-mail and network printing.

Using a Particle Generator *(optional)*

If minimum ambient particle concentration levels needed for fit testing are not present, particles must be generated. The best way to generate particles is with the optional TSI® Particle Generator Model 8026. The Model 8026 Particle Generator supplements naturally occurring particles with non-toxic salt (NaCl) particles in the appropriate size range for the **PortaCount™** Fit Tester. The particle generator uses a 100-mg salt tablet (sodium chloride or NaCl), dissolved in distilled water.

Refer to the generator's manual for information on its operation and maintenance, or refer to the Particle Generator Model 8026 information on the TSI® Web site www.tsi.com.

Follow these additional important guidelines when using the Model 8026 Particle Generator with a **PortaCount™** Fit Tester:

- Keep the particle generator or any other sources of particle generation at least 6 feet/ 2 meters away from the **PortaCount™** Fit Tester during operation.
- For the particle generator to function properly, operate the generator and conduct the fit tests in an enclosed area. A room smaller than 400 ft²/ 7 m² would provide the best conditions. Particle generation will not function as efficiently in an open cubicle area or a very large room.
- Use the particle generator and other forms of particle generation sparingly, when needed. Often they are only needed in the morning hours or at the beginning of fit testing. **DO NOT** operate any form of particle generation if ambient particle concentrations are above 8,000 particles/cm³ for the Model 8040 or 8048 when testing respirators with 99% (N99 Mode) efficiencies or greater, or above 800 particles/cm³ for the Model 8048 when testing respirators with <99% (N95 Mode) efficiencies.


(This page intentionally left blank)


CHAPTER 3

FitPro™ Ultra Fit Test Software Operation


FitPro™ Ultra Fit Test Software controls and manages the **PortaCount™** Respirator Fit Tester Models 8040 and 8048 and many of the records associated with fit testing. This chapter describes the operation and menus of the software.





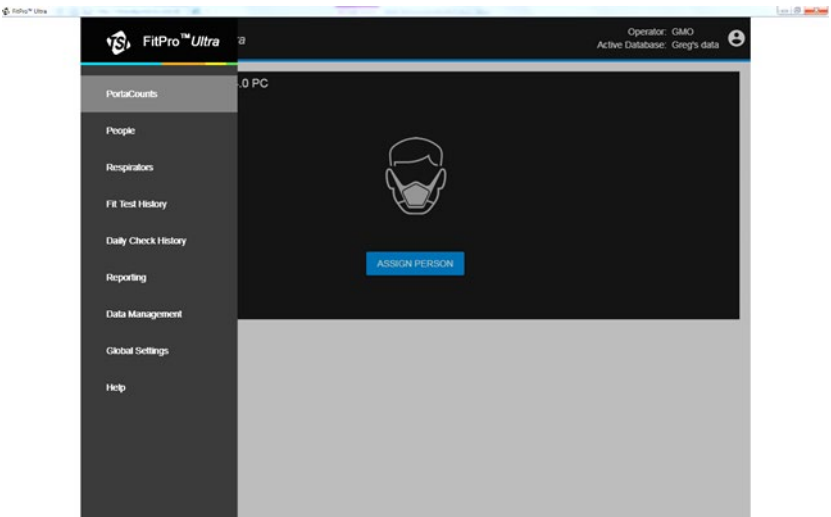

The Main Menu



From any screen, select the menu icon  to display the main menu. A description of each menu item follows.




PortaCounts

Select **PortaCounts** option from the main menu to work with your **PortaCount™** Fit Tester. If you have not conducted a daily check recently, it will prompt you to do so. Otherwise it will prompt you to configure a fit test. You can select from the following activities by clicking the **PortaCount™** Fit Tester menu icon .


| | |
|---|--|
|  | <p>Fit Test</p> <p>Begins a fit test. Refer to Chapter 6 for complete instructions on performing a fit test.</p> |
|  | <p>Daily Check</p> <p>Starts a daily check before running any fit tests. See Chapter 4 for complete instructions on performing daily checks.</p> |
|  | <p>Real Time Mode</p> <p>Operates the instrument in real-time mode to do either an ambient concentration check to determine if enough particles are present to conduct fit testing, or how to troubleshoot room setup to conduct fit testing. Additionally, a real-time FitCheck Mode can be used with individuals to train on proper respirator selection, sizing, donning training, making adjustments for proper fit or to troubleshoot a failed test. See Chapter 5 for complete instructions on using the Real-Time FitCheck™ Mode.</p> |
|  | <p>PortaCount Settings</p> <p>View or change settings for the connected PortaCount™ Fit Tester.</p> <p>From the General Settings tab you can:</p> <ul style="list-style-type: none"> ■ Name the PortaCount™ Fit Tester (just type over the serial number) ■ Check for firmware updates. <ul style="list-style-type: none"> ○ If a new version is available, follow the on-screen instructions to update your firmware. <p>From the Network Settings tab you can configure the settings that you use when you connect wirelessly to your PortaCount™ Fit Tester. You can change the Access Point SSID which is the network connection name. Also you can set your Access Point Password which is the security ID for the network connection. Note that you may alter these settings only when you are connected with USB. These settings take effect immediately and are stored on the PortaCount™ Fit Tester.</p> |
|  | <p>Disconnect PortaCount</p> <p>Select to disconnect the PortaCount™ Fit Tester.</p> |
|  | <p>Change user, protocol, or respirator after you have already assigned a person to start a fit test.</p> |




The **PortaCount™** Fit Tester's communication method is always displayed with a USB  or a Wi-Fi®  symbol.



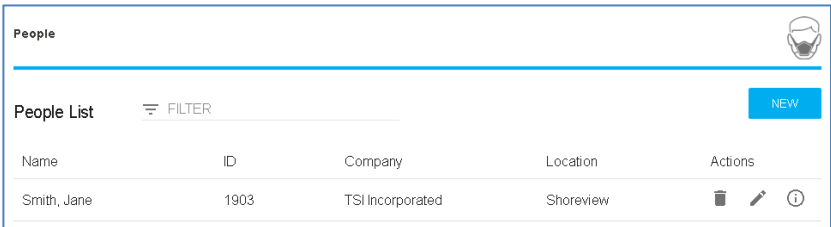

FitPro™ Ultra Software may display a status icon . If this icon appears, click on it to display messages and alerts about the system. The icon is displayed only when measurements are taking place. When the status is good the icon will not display. For more information, see [Chapter 7](#).

People

Select **People** from the Main Menu to view the list of fit test subjects that are stored in the program. People are listed alphabetically. You can sort them by ID number if desired, or use a filter such as first or last name, company, location, etc.






| Name | ID | Company | Location | Actions |
|-------------|------|------------------|-----------|---|
| Smith, Jane | 1903 | TSI Incorporated | Shoreview |    |




From this screen you can also delete a person , edit information about the person , or display the information already collected about the person . By selecting , a person edit person screen is shown. Click **Active** to make a person active or inactive. If a person is inactive, they are excluded from selection during fit testing. Inactive people are still included in reports of historical fit tests.

To add a person, click **NEW** and fill in the required and optional information.

Respirators

Select **Respirators** from the Main Menu to view the list of respirators that are stored in the program. Respirators are listed alphabetically. You can sort the respirators by model if desired or use a filter such as manufacturer, style, etc.

| Respirators | | | | | |
|-----------------|-------|-------|-----|------------|---|
| Respirator List | | | | | NEW |
| Manufacturer | Model | Style | N95 | Pass level | Actions |
| ACME | 1000 | N95 | Yes | 100 |    |

From this screen you can also delete a respirator , edit information about the respirator , or display the information already collected about the respirator .

To add a respirator, click **NEW** and fill in the required and optional information.

Select **N95** if this is a respirator with <99% efficient filter media. Select **Use Auto Description** if you want **FitPro™ Ultra** Software to automatically create a description for the respirator. The description appears on the fit test report.

Reporting

Select **Reporting** from the Main Menu to view a list of basic report types.

| FitPro™ Ultra | | Operator: GMO | Active Database: Greg's data |
|---------------|---|---------------|------------------------------|
| PortaCounts | | | |
| People | | | NEW |
| Respirators | | | |
| Report Type | Description | Actions | |
| People | Report of people registered for fit testing | ⋮ | |
| Respirator | Report of respirators used for fit testing | ⋮ | |
| Next Due | Report of people due for fit testing | ⋮ | |
| Past Due | Report of people past due for fit testing | ⋮ | |
| Daily Check | Report of logged Daily Checks | ⋮ | |
| Fit Test | Report of completed fit tests | ⋮ | |


Basic Report types include:

| | |
|---------------------|---|
| People | Report of people listed in database for fit testing. |
| Respirator | Report of respirators listed in database for fit testing. |
| Next Due | Report of people due for fit testing. |
| Past Due | Report of people past due for fit testing. |
| Daily Checks | Report of logged Daily Checks. |
| Fit Test | Report of completed fit tests. |

Example People Report


Create people report for people with last names between “Aaberg” and “Byse”.

1. Click on **New** and choose **People**.

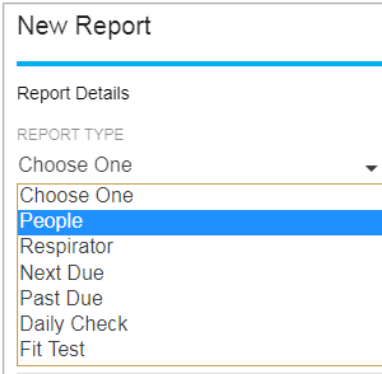

The screenshot shows a 'New Report' dialog box. Under the 'Report Details' section, the 'REPORT TYPE' is set to 'Choose One'. A dropdown menu is open, showing the following options: 'Choose One', 'People' (highlighted in blue), 'Respirator', 'Next Due', 'Past Due', 'Daily Check', and 'Fit Test'.

2. Fill out the report details:

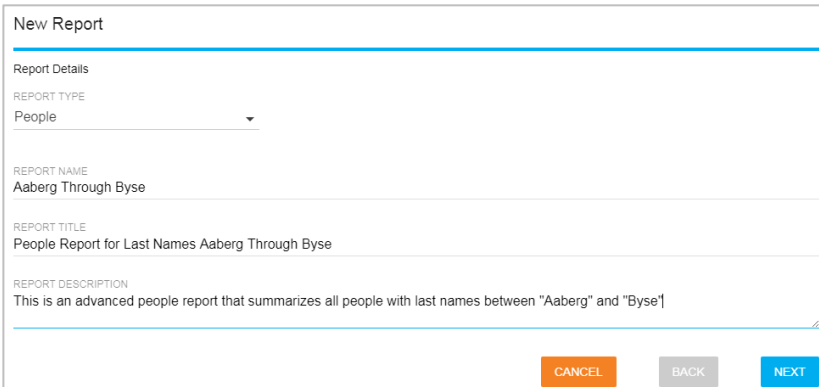

The screenshot shows the 'New Report' form with the following details filled out:

- REPORT TYPE:** People
- REPORT NAME:** Aaberg Through Byse
- REPORT TITLE:** People Report for Last Names Aaberg Through Byse
- REPORT DESCRIPTION:** This is an advanced people report that summarizes all people with last names between "Aaberg" and "Byse"

At the bottom of the form, there are three buttons: 'CANCEL' (orange), 'BACK' (grey), and 'NEXT' (blue).

- Click on the three-dot menu for this newly created “People Report” then click **Configure**.

Reports

FILTER NEW

| Report Name | Report Type | Description | Actions |
|---------------------|-------------|---|---------------|
| People Report | People | Report of people registered for fit testing | ⋮ |
| Respirator Report | Respirator | Report of respirators used for fit testing | 🗑️ Delete |
| Next Due Report | Next Due | Report of people due for fit testing | 🕒 Details |
| Past Due Report | Past Due | Report of people past due for fit testing | ⚙️ Configure |
| Daily Checks Report | Daily Check | Report of looped Daily Checks | 🖨️ View/Print |

- Select **RANGE** as the filter.

New Report Selected records: 20000

Report Data

| Sort By | Columns | Filter |
|--------------------------------------|--------------|------------------------|
| <input checked="" type="radio"/> ▲ ▼ | Last Name ▼ | RANGE ▼ FROM — THROUGH |
| <input type="radio"/> ▲ ▼ | First Name ▼ | ALL ▼ |

- As an example in the “FROM” input box for “Last Name,” Type “A” and click on **Aaberg**.

Configure Report: People Report Selected records: 20000

Report Data

| Sort By | Columns | Filter |
|--------------------------------------|--------------|----------------------------|
| <input checked="" type="radio"/> ▲ ▼ | Last Name ▼ | RANGE ▼ FROM A ▼ — THROUGH |
| <input type="radio"/> ▲ ▼ | First Name ▼ | ALL ▼ |

- Aaberg
- Aagaard
- Aaland
- Aalbers

6. As an example in the “THROUGH” input box for “Last Name,” type “By” and then click on **Byse**.

Configure Report: People Report Selected records: 2538

Report Data

| Sort By | Columns | Filter | FROM | THROUGH |
|--------------------------------------|------------|--------|------|---------|
| <input checked="" type="radio"/> ^ v | Last Name | RANGE | A | By |
| <input type="radio"/> ^ v | First Name | ALL | | |
| <input type="radio"/> ^ v | ID | ALL | | |
| <input type="radio"/> ^ v | Company | ALL | | |

- Byard
- Byas
- Byerley
- Byers
- Byler
- Bynum
- Byram
- Byrne
- Byrnes
- Byse**

7. Click **Save**.
8. To view or print the report: Click  for this newly created “People Report” and click **View/Print**.



Aaberg Through Byse People This is an advanced people report that summ... ⋮

- Delete
- Details
- Configure
- View/Print**

9. FitPro™ Ultra software will build the report for viewing or printing.

Aaberg Through Byse

2549 Records

People Report for Last Names Aaberg Through Byse 10/01/2018


| Last Name | First Name | ID | Company | Location |
|-----------|------------|-------|---------|-------------|
| Aaberg | Ollie | 67016 | Ideal | Brooklyn |
| Aagaard | Beatrice | 18625 | Mattel | Hawthorne |
| Aaland | Sid | 23092 | Wham-O | San Gabriel |
| Aabers | Robin | 38482 | Wham-O | San Gabriel |
| Aaron | Clint | 51292 | Hasbro | Pawtucket |
| Aarsvold | Cory | 92190 | Lionel | New York |
| Abair | Carolann | 75656 | Hasbro | Pawtucket |
| Abasta | Letha | 82961 | Marx | New York |
| Abbassi | Nelia | 45532 | Lionel | New York |
| Abbott | Claud | 35650 | Marx | New York |
| Abdalla | Abigail | 85467 | Hasbro | Pawtucket |
| Abdalla | Sandee | 29929 | Mattel | Hawthorne |

DONE

Creating New Reports


1. Click the **NEW** button.

Reports

 FILTER **NEW**

| Report Name | Report Type | Description | Actions |
|---------------------|-------------|---|---------|
| People Report | People | Report of people registered for fit testing | ⋮ |
| Respirator Report | Respirator | Report of respirators used for fit testing | ⋮ |
| Next Due Report | Next Due | Report of people due for fit testing | ⋮ |
| Past Due Report | Past Due | people past due for fit testing at Cox Hlth North | ⋮ |
| Daily Checks Report | Daily Check | Report of logged Daily Checks | ⋮ |
| Fit Test Report | Fit Test | Report of completed fit tests | ⋮ |

2. A dialog with basic report descriptions is shown.

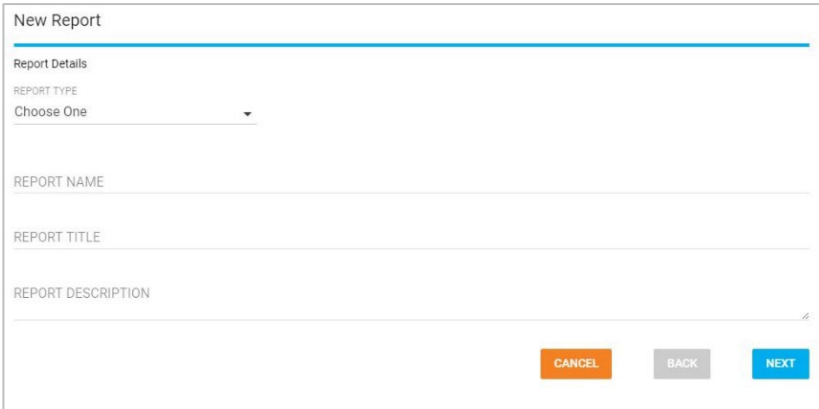

New Report

Report Details

REPORT TYPE
Choose One


REPORT NAME

REPORT TITLE

REPORT DESCRIPTION

CANCEL BACK NEXT

3. From the **REPORT TYPE** drop-down select the type of report you want to create.
4. Enter a report name.
5. Enter a report title.
6. Optionally enter a report description.
7. Click the **NEXT** button.
8. Configuration options are now shown for your new report.

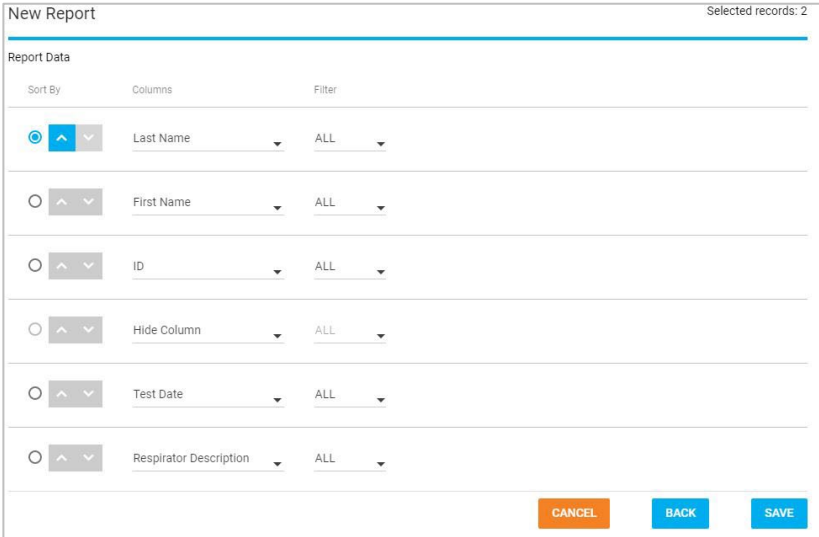

New Report Selected records: 2

Report Data

| Sort By | Columns | Filter |
|--------------------------------------|------------------------|--------|
| <input checked="" type="radio"/> ^ v | Last Name | ALL |
| <input type="radio"/> ^ v | First Name | ALL |
| <input type="radio"/> ^ v | ID | ALL |
| <input type="radio"/> ^ v | Hide Column | ALL |
| <input type="radio"/> ^ v | Test Date | ALL |
| <input type="radio"/> ^ v | Respirator Description | ALL |

CANCEL BACK SAVE

9. To go back and change the type, name, title or description, click the **BACK** button.
10. Reports support a maximum of 6 columns.
11. From the **Columns** drop-down in each row of the displayed table select what data you would like to show. To omit a column and have fewer than 6, select **Hide Column**. The order that columns are selected in the table is how they will appear in the report (if the first row has last name the first column of the report will be last name).
12. Select how you would like to filter a particular column. This is done by selecting a value for a row in the Filter Column.

Options are:

| | |
|---------------|------------------------------|
| ALL | Shows all values for column. |
| RANGE | Shows a range of values. |
| FILTER | Shows a custom filter. |

For **N95-Companion™** options are **ALL N95** or **N99**.

- a. **RANGE** filter will give you a form and through field to input. Enter the range of values you want in your report. If you want first names from A through B, you would enter A, the range would go through to the letter C.
- b. **FILTER** gives you an input to enter what you would like to filter on. Drop-down suggestions are shown to help with this. For example, If you only want people with the first name Joe, you would enter Joe into that field.

The image shows a user interface for filtering data. It consists of two rows of filter controls. Each row starts with a radio button. The first row has a dropdown menu showing 'ID', another dropdown menu showing 'FILTER', and a text input field with the value 'FILTER'. The second row has a dropdown menu showing 'First Name', another dropdown menu showing 'RANGE', a text input field with the value 'FROM', and a text input field with the value '— THROUGH'.


13. The first column of the table shown is **Sort By**. Select the row you would like your report to be sorted by. Secondary and tertiary sorting is done by the order of the columns. So if you sort by ID and the 2nd and 3rd row is company and first name, the report will be sorted by ID then company then first name. The arrows next to the radio button allow you to select sorting by ascending or descending.

14. As the report is configured a counter in the top right of the dialog displays the number of records that will be shown in the report as currently configured.
15. Click **SAVE**. The main report page is now shown with your new report in the table.

Fit Test History Feature and Multi-Respirator Fit Test Card Feature

A fit test history feature was added to provide a quick method for viewing fit test records. A “Multi-Respirator Fit Test Card” feature was added that gives fit test operators the ability to print multiple respirators on one fit test card.

1. Navigate to **Fit Test History**.

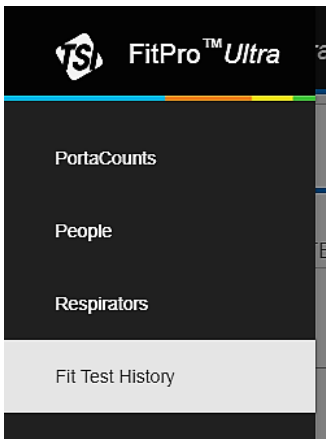

2. Click on **CREATE MULTI-RESPIRATOR FIT TEST CARD**.
3. Begin typing a last name or ID in . The input field contains the text 'Select a Person' and a search icon. Above the input field is the placeholder text 'BEGIN TYPING LAST NAME, FIRST NAME, OR ID TO SEARCH'.
4. Select the person to print a fit test card for.
5. Select up to five fit tests to include on the printed card and click **PRINT**.

6. Example card:

| Respirator Fit Test Card | | | | | |
|-----------------------------------|-----|-------------|-----------|------|-----|
| ALAN GAROFALO 1245 | | | | | |
| EXP | MFG | MODEL | TYPE | SIZE | FF |
| 03/08/2017 | MSA | ULTRA ELITE | FULL FACE | MED | 550 |
| 03/08/2016 | MSA | ULTRA ELITE | FULL FACE | MED | 550 |
| Protocol: OSHA 29CFR1910.134 | | | | | |
| Method: QNFT using TSI PortaCount | | | | | |

Global Settings

Select **Global Settings** from the Main Menu to view settings which apply when conducting fit tests, daily checks, or printing. Press **EDIT** to modify these screens and press **SAVE** to confirm your changes.

Fit Test – Global Settings

| Field or Button | Description |
|-----------------------|--|
| Automatically Save | Select which fit test data is saved. There are two options: <ul style="list-style-type: none">■ All Fit Tests Saves all fit test results whether the test passed or failed.■ Passed Fit Tests Only The default choice. Saves only passing fit test records. |
| Default Protocol | Use the drop-down box to select the default protocol used for fit testing. You can still select a different protocol before actually starting a fit test. |
| Automatic Termination | If this option is turned on, the software automatically terminates the fit test when the overall fit factor becomes impossible to achieve. The default for this option is off. |

| Field or Button | Description |
|----------------------------------|--|
| Warn When Fit Factor is Above... | <p>This option is enabled by default. If it is enabled, a message appears when the fit factor for any exercise exceeds the value entered. The test continues regardless of the alert. The purpose of the alert is to inform an inexperienced fit test operator that something <i>may</i> be wrong, such as a blocked sample tube. If this option is enabled, the value should be set at a fit factor level that will almost never occur unless something <i>is</i> wrong. A blocked respirator sample tube will often result in fit factors well over 500,000. The default fit factor value is 100,000; however, you may have to select a higher value more appropriate for the types of respirators you use and other considerations.</p> |
| N99 High Concentration Message | <p>Set the threshold for the N99 High Concentration alert. The default value is 30,000 pt/cm³.</p> |
| N95 High Concentration Message | <p>Set the threshold for the N95 High Concentration alert. The default value is 1,500 pt/cm³.</p> |

Daily Check – Global Settings

Changing the Daily Check settings is not recommended unless you have had advanced training in **PortaCount™** Fit Tester operation.

Print – Global Settings

| Field or Button | Description |
|--|--|
| Automatically Print Fit Test Reports | <p>Automatically prints one fit test report at the end of each fit test. This is useful if you plan to give test subjects a copy of the test results or if you save hard-copy test records. The report is sent to the default Windows® printer.</p> <p>You have two options:</p> <ul style="list-style-type: none">■ Saved Fit Tests Only Prints a report for every saved fit test. You can change the number of fit test reports to print by selecting EDIT and changing the number of copies.■ Do Not Print This is the default choice. Use this if no printer is available during fit testing. The report can be printed later. <div style="border: 1px solid black; padding: 5px;"><p style="text-align: center;">NOTICE</p><p>The printer must be set up before automatic reports are generated at the end of a fit test. FitPro™ Ultra software will use the default printer on your computer or tablet.</p></div> |
| Show Card on Fit Test Report | Select whether to “ Show Card on Fit Test Report. ” Select EDIT to enter company name if this option is turned on. |
| Show Signature Lines on Fit Test Report | Select whether to show signature lines on the fit test report. |

Help

Select **Help** from the Main Menu to access help topics. You can also view the current version of **FitPro™** Ultra Fit Test Software. If you are online and you have created a TSI® Software account, you can also update your version of software if a new version is available.

Daily Checks

Each day, before using the **PortaCount™** Respirator Fit Tester, you should run a series of checks to make certain the instrument is operating properly. These daily checks are:



- Particle Check
- Classifier Check (only for the **PortaCount™** Model 8048 with N95 enabled)
- Zero Check
- Maximum Fit Factor Check


NOTICE

TSI® recommends these Daily (maintenance) Checks be performed once each day before the **PortaCount™** Respirator Fit Tester is used and whenever a problem is encountered. Failure of any of the Daily Checks requires immediate attention. See [Chapter 7](#). If the **PortaCount™** Respirator Fit Tester passes the Daily Checks, and you have difficulty fit testing, the problem is most likely **NOT** in the **PortaCount™** Respirator Fit Tester. Examine the respirator and respirator sample adapter carefully for leaks or pinched tubes.

To start the Daily Checks:

1. If necessary, review the steps in [Chapters 2](#) and [3](#) to prepare the instrument for the Daily Checks.
2. Start the **PortaCount™** Fit Tester and **FitPro™** Ultra Software on the tablet or computer. Log into the software and connect to the **PortaCount™** Fit Tester.

3. Select **PortaCount** from the Main menu  and select Daily Check from the PortaCount menu . The Daily Check screen will be displayed.

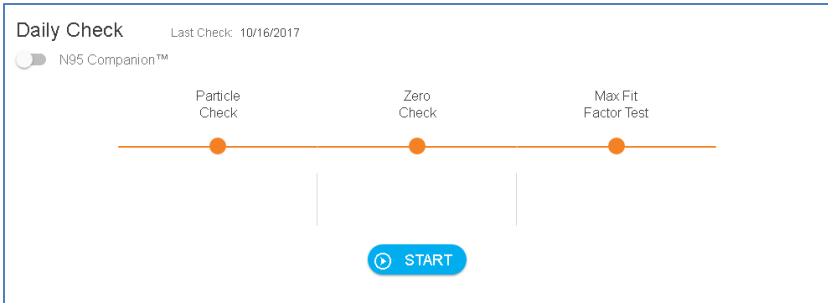




4. If this Daily Check is to include a classifier, check for a Model 8048 with N95 enabled, click **N95-Companion**. Otherwise skip this step.
5. The automated Daily Check program will give you step-by-step instructions. First, remove the HEPA filter from the clear sample tube if one is connected and press the **START** button.
6. The first check is the Particle Check, which determines if the **PortaCount™** Fit Tester is working and if the concentration of particles in the ambient air is sufficient to conduct fit testing.
7. If the “**N95 enabled**” box is selected, the Particle Check is immediately followed by the Classifier Check. The Classifier Check verifies the N95-Companion™ Technology Classifier is functioning properly.
8. The next check is the Zero Check, which provides assurance that there are no leaks in the system. You will be instructed to attach the HEPA filter to the clear sample tube and press **CONTINUE** on the screen to start the Zero Check.
9. If the Zero Check fails, see [Chapter 7](#). If the **PortaCount™** Fit Tester fails the Zero Check, any fit tests you conduct may result in lower fit factors than would be measured otherwise. The risk is that you may fail people who have good fits, thereby wasting time and effort. There is no possibility that failing the Zero Check could result in overstated fit factors (i.e., may pass people who have bad fits). This is because any particles leaking into the **PortaCount™** Fit Tester are interpreted as respirator leakage, resulting in lower fit factors.

10. The Maximum Fit Factor Check is performed after the Zero Check. This check determines if the **PortaCount™** Fit Tester is capable of measuring high fit factors and if the internal switching valve is functioning properly. The test is essentially a fit test on a HEPA filter which simulates a perfect fitting respirator.

A very high fit factor should result if the instrument is working properly. The Max FF Check actually measures the maximum fit factor that can be determined by the **PortaCount™** Fit Tester given the local ambient particle concentration and the respirator sample time programmed into the **PortaCount™** Fit Tester.

Daily Check History Feature

A daily check history feature is available to provide a quick method for viewing and searching daily check records.

1. Click on  then click on .
2. Search for a daily check record by typing a **PortaCount™** Serial number or Date/Time in .

(This page intentionally left blank)

Real-Time FitCheck™ Mode

This chapter covers the following items:

- Real-Time **FitCheck™** Mode
- Ambient Concentration Check

Real-Time Training

The Real-Time **FitCheck™** Mode display is generally used for respirator training and troubleshooting. It allows a test subject to experiment with strap tension and other adjustments while watching the direct effect these efforts have in real time.


The test subject learns how each adjustment affects the fit, and how to achieve a fit that is comfortable and has minimum leakage.


NOTICE

This feature is intended for training. It should not be used immediately before a fit test. Using the feature to help the test subject don the respirator immediately before the official fit test defeats one of the main purposes of fit testing: to prove that the test subject knows how to don the respirator properly without help. Use the real-time fit factor feature for training, practice and troubleshooting failed fit tests only.

You can use the real-time fit factor display prior to a fit test as long as you have the test subject remove the respirator and put it on again (without the use of the real-time display or other assistance) before the final test.

Before starting the Real-Time **FitCheck™** Mode screen, have the test subject put on the respirator and make sure it is properly attached to the **PortaCount™** Fit Tester.

Select Real-Time **FitCheck™** Mode from the **PortaCount™** menu  to display the real-time fit factor screen. You can view the real-time information either with the real-time gauge or graph.

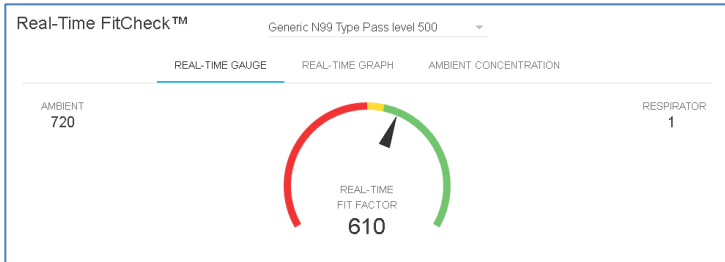

To start the real-time operation, select a respirator from the drop-down list. You can select a respirator which you have defined or alternatively you can use one of two generic respirators predefined in the **FitPro™** Ultra Software. The respirator that you select lets the **PortaCount™** Fit Tester correctly enable the N95-Companion™ Technology and it lets the software show the respirator's pass/fail level on the chart.


The **PortaCount™** Fit Tester takes an ambient concentration reading and stores the value. Next it purges the respirator and then begins continuous concentration reading of the respirator concentration providing a continuous display of real-time fit factor based on C_{out}/C_{in} .

The graphics let you (and the test subject) observe the Fit Factor reading as it fluctuates in near real time. There is a delay of a few seconds between when a change in fit occurs and when the graph displays the change in fit factor.

The graph pauses every five minutes while the **PortaCount™** Fit Tester takes a fresh ambient air measurement.

Concentration Check

Real-time operation also has an “Ambient Concentration” check mode. In this mode, the **PortaCount™** Fit Tester continuously measures the particle concentration through the ambient inlet port. This allows you to easily check ambient concentration of the fit testing area in preparation to conduct testing. You must select a respirator when using the Ambient Concentration mode in order to correctly enable the N95-companion™ technology.

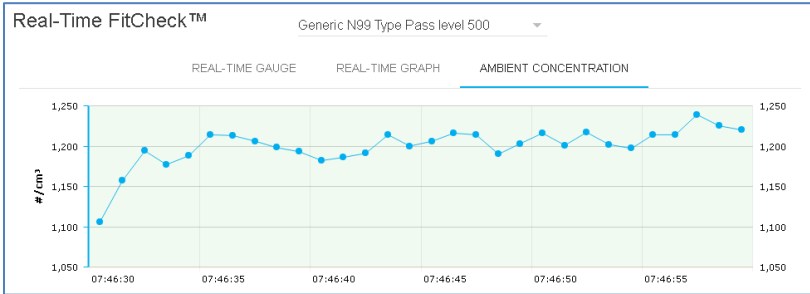

(This page intentionally left blank)

Fit Testing

Precautions for Fit Testing

The following is a discussion of several precautions to consider prior to conducting a fit test:

| | |
|---|---|
| <p>Fit Testing People Who Smoke Cigarettes or Cigars</p> | <p>Smokers exhale particles for at least 30 minutes after they have smoked a cigarette or cigar. The PortaCount™ Fit Tester can count these particles and will interpret them as if they were caused by face seal leakage. It is very important to instruct individuals not to smoke for at least 30 minutes prior to fit testing. Fit factors for anyone who has smoked recently will be lower than that individual deserves and may even cause him or her to fail the fit test entirely.</p> |
| <p>Fit Testing with Generated Aerosols</p> | <p>The PortaCount™ Fit Tester is designed to operate using the microscopic particles in the ambient air. It can measure particle concentrations and fit factors when generated aerosols (like corn oil, salt or DOP) are used; however, these aerosols may cause the PortaCount™ Fit Tester to need more frequent cleaning and calibration.</p> |
| <p>Fit Testing Near Irritant Smoke</p> | <p>DO NOT conduct fit tests in close proximity to sources of irritant smoke like those used for qualitative fit testing. The irritant smoke is corrosive and can damage the PortaCount™ Fit Tester. Fit testing near sources of amyl-acetate (banana oil) is not a problem.</p> |

NOTICE

The measurement provided by the **PortaCount™** Respirator Fit Testers are an assessment of respirator fit during a fit test only. Respirator fit at other times will vary. The fit factor value is not intended for use in calculating an individual's actual exposure to hazardous substances.

About Respirators and Fit Testing

The conventional way to quantitatively fit test is through the use of probed test respirators, but fit tests can also be performed on disposable respirators and positive pressure respirators. This chapter discusses the types of respirators and provides instructions on installing a sampling port to a disposable filtering-facepiece.

These **PortaCount™** Fit Testers provide fit testing compliant with DIN ISO 16975-3, OSHA 29CFR1910.134, ANSI/ASTM Z88.10-2001, CSA Z94.4-2011, and HSE INDG 479.

Probed Test Respirators


A probed respirator has a fitting (probe) installed that allows air from inside the respirator to be sampled by an instrument like the **PortaCount™** Respirator Fit Testers. The probed respirator is considered to be modified from its original design and as such can only be used for fit testing and cannot legally be used in a potentially hazardous workplace environment. You will need at least one respirator of each make, model and size your company issues. After the fit test, issue the individual a respirator with the identical facepiece, only without the permanent probe.

Most probed respirators are obtained from the respirator manufacturer or distributor. You should be able to buy probed versions of most, if not all, models. Be sure to buy class-100 or class-99 filters also if you do not already stock them. Class-100, class-99, or P3 filters must be used for fit testing even if you use another type of cartridge in the workplace.



Fit Testing with the Person's Own Assigned Respirator

Some respirators, especially older models, do not have fit test adapters available. In that case, a permanently probed test respirator is the only option.

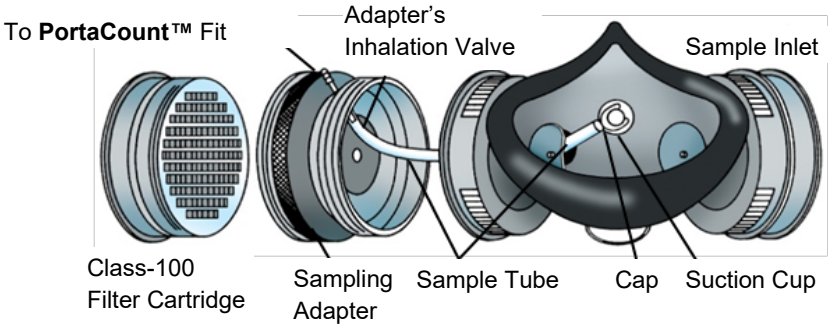

Respirator Manufacturers' Technique

There are a growing number of respirator manufacturers who provide respirator sampling adapters that permit fit testing in one's own respirator. Contact your distributor or call the manufacturer direct and ask if such accessories are available.

TSI® Fit Test Adapter Kits

TSI® Respirator Sampling Adapters allow you to fit test using the respirator that is actually used by that individual. Respirator sampling adapters for most major brands of respirator are available. A complete list of fit test adapters available from TSI® and from respirator manufacturers is posted on www.tsi.com.

Homemade Adapters

A sampling adapter can be made by modifying a respirator cartridge. This usually involves running a tube through the cartridge and into the respirator. TSI® recommends that this option be avoided because it is so easy to do poorly. The most fundamental mistake that is often made is to not extend the sampling tube through the inhalation valve and into the breathing zone. This, combined with problems sealing around the outside of the tube, make this option unattractive.

Probes for Filtering-Facepiece (Disposable) Respirators

Disposable respirators can be fit tested by inserting a test probe through the filter material. The optional TSI® Model 8025-N95 Probe Kit includes disposable probes and insertion tools. Order TSI® Model 8025-N95R Probe Refill Kit for additional probes (PortaPunch™ tool not included).

NOTICE

The **PortaCount™** Model 8040 can successfully fit test class-100, class-99, and P3 disposable respirators. Lower efficiency disposable respirators such as NIOSH Series 95, FFP2, and FFP1 will usually require use of the **PortaCount™** Model 8048 with N95-Companion™ Technology.

Inserting a Test Probe in a Disposable Respirator with the TSI® Model 8025-N95 Probe Kit


In order to perform a quantitative fit test the **PortaCount™** Respirator Fit Tester must draw an air sample from inside the respirator while it is being worn by the person being fit tested. Use the PortaPunch™ Probe Insertion Tool, sampling probes, and push nuts contained in this kit to install a sampling port onto any disposable filtering-facepiece respirator.

NOTICE

Once a sampling probe is installed the respirator can no longer be used for respiratory protection. Ported respirators are for quantitative fit testing only. Discard (or sanitize) the respirator after each fit test is completed. (Follow the respirator manufacturer's recommendations.)

1. Choose a location to install the sample probe.

For proper fit testing, the sampling point must be in the “breathing zone” of the respirator user. For most respirators, this is in the center of the respirator between the person’s nose and mouth.


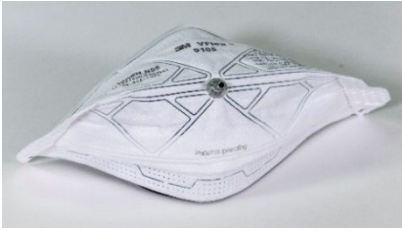


For Flat “Duckbill” Style Respirators—install the probe near the outer edge of the **bottom panel** where it cannot be blocked by the person’s chin.



For Respirators with Center-Mounted Exhalation Valves—install the probe to the left or right of the valve. **DO NOT** install the probe above or below the valve because this risks having the probe blocked by the person’s nose or chin.

Correct probe location to left (or right) of valve

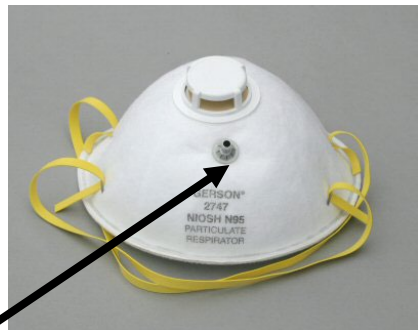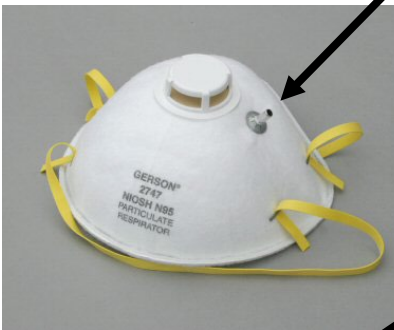


Wrong probe location below (or above) valve


For Respirators with an Outer Mesh—install the probe normally as if the mesh was not present. The sampling probe and push nut will seal properly right through the mesh.



Step 2: Load a sample probe onto the PortaPunch™ piercing tool.

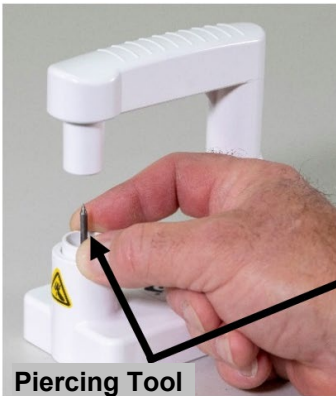


Piercing Tool

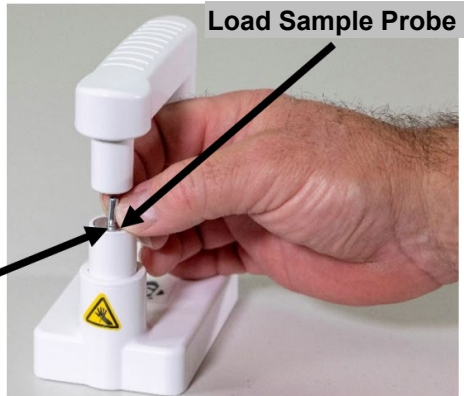


Load Sample Probe

Step 3: Load a push nut onto the magnetic push nut tool on the PortaPunch™ tool.

MAKE SURE THE CONCAVE SIDE OF THE PUSH NUT IS FACING UP.

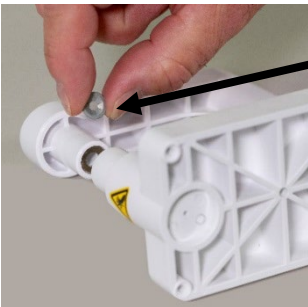

Push Nut

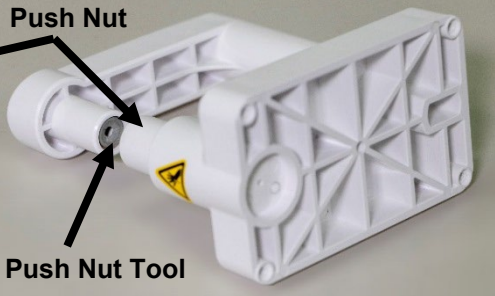


Push Nut Tool

Step 4: Use the PortaPunch™ Probe Insertion Tool (with probe loaded) to puncture the respirator **from the inside**. It is not necessary to push the probe all the way through. All you need to do is get the point through far enough to be seen from the other side.



Step 5: Next, press down on the PortaPunch™ lever arm to engage the push nut onto the exposed point poking through the respirator and firmly push them together as far as possible.

Step 6: Release the PortaPunch™ lever arm and remove the respirator and inspect the sample port to make sure it is tightly secured and will not leak. You should not be able to rotate the probe with your fingers. If necessary, use the PortaPunch™ Probe Insertion Tool again to tighten the port.

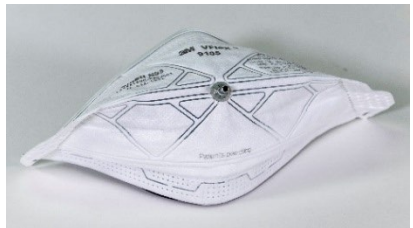

The respirator is now ready for fit testing.

NOTICE

Once a sampling probe is installed into a disposable respirator, the respirator cannot be used for respiratory protection. **PROBED RESPIRATORS ARE TO BE USED FOR QUANTITATIVE FIT TESTING ONLY.** Discard each probed disposable respirator after a fit test is completed.

Conducting a Fit Test



Before you conduct a fit test, be certain you have read the Operation and Daily Check chapters.

Conduct a Fit Test as follows:

1. Instruct the user to put on the respirator five minutes before the fit test starts to purge the particles trapped inside the respirator and permit the wearer to make certain the respirator is comfortable. Have the subject don the respirator **without assistance**. Fit test results depend on the subject knowing how to properly don the respirator. Train all subjects in proper respirator-donning techniques before being fit tested. **DO NOT** allow the subject to adjust the respirator during the exercises, as this invalidates previous exercise results.

If testing a disposable filtering facepiece respirator, have the fit-test subject hang the tubing support neck strap around his or her neck, adjusting it to a comfortable position. Position the tubing support neck strap so that the tubing does not pull the respirator off the person's face. Have the person tilt his or her head up and down, turn side to side, and bend over to see if the tubing pulls the respirator away from their face. If it does, readjust the neck strap or the tubing and repeat check the fit again.



2. Make sure the instrument is turned on, the alcohol cartridge is charged with alcohol, and the twin tube assembly is attached as described in [Chapter 1](#).
3. Launch the **FitPro™** Ultra Software. Select **PortaCounts** from the main menu . Then from the **PortaCount™** menu  select Fit Test.

- Select Assign Person and choose a fit test subject from the list of names. Also select a respirator, a respirator size and a protocol. Confirm the Next Test Date.

Assign

1 Select User NEW

| Name | ID | Actions |
|---------------------|------|---------|
| Schultz, Jay | 007 | |
| Ocha, Dan | 1234 | |
| Smith, John | 1255 | |
| Doessett, Jane | 1509 | |
| Olson, Gregory | 4532 | |
| Nomonda, Scott | 4639 | |
| Frankhan, Katherine | 6387 | |
| Shoeman, Jim | 5871 | |
| Nelsonius, Topher | 3478 | |
| Turquisto, Kev | 7412 | |

2 Respirator and Protocol

PROTOCOL
OSHA 29CFR1910.134

RESPIRATOR MODEL/STYLE
Choose One

RESPIRATOR SIZE
Choose One

NEXT TEST DATE
10/6/2018

CANCEL ASSIGN

- Once the fit test is configured, select **ASSIGN**. The following **Ready** screen will appear.

Ready Exercise 0 of 8

AMBIENT RESPIRATOR

REMAINING
00:00

START


| Exercise | Fit Factor |
|---------------------|------------|
| ① NORMAL BREATHING | |
| ② DEEP BREATHING | |
| ③ HEAD SIDE TO SIDE | |
| ④ HEAD UP AND DOWN | |
| ⑤ TALKING | |
| ⑥ GRIMACE | |

- Press **START** to begin the fit test.
- Have the user follow the animated fit test exercises one after another as prompted. The active exercise is highlighted in the table and the animation shows the actions and pace of the exercise.

| Exercise Name | Description |
|--------------------------|---|
| Normal breathing | Remain still and breathe normally. |
| Deep breathing | Take long deep breaths as if working hard. DO NOT OVERDO IT. |
| Head side to side | Breathe normally while slowly turning the head from side to side. Turn far enough to each side to stretch the neck muscles. Each cycle from left to right should take several seconds, pausing momentarily at each side to take a breath. |
| Head up and down | Breathe normally while slowly alternating between looking up at the ceiling and down at the floor. Each up and down cycle should take several seconds, pausing momentarily at each up and down to take a breath. |
| Talking out loud | Read a prepared paragraph (like the Rainbow Passage located in Appendix B of this manual) or count out loud to simulate a workplace discussion. |
| Grimace | Grimace by smiling and/or frowning to create a leak in the respirator face seal. This exercise will often result in a failed fit factor, which is why the OSHA standard allows you to exclude that fit factor when computing the overall fit factor. When performing the grimace, you are intentionally creating a break in the face seal in order to see if the respirator re-seals itself afterwards. Successful re-sealing is proven by achieving a passing fit factor on the next exercise. |
| | NOTICE |
| | The OSHA protocol includes special provisions for the grimace exercise. It is allowed to be 15 seconds long and the resulting fit factor may be discarded (excluded) before calculating the overall fit factor. This is allowed because the grimace exercise is done to intentionally break the face seal in order to make sure the respirator reseals itself before the next exercise. |

| Exercise Name | Description |
|-------------------------|---|
| Bending over | Breathe normally while slowly bending over at the waist as if you were touching your toes and then moving back to an upright position. Each cycle from upright to bending over should take several seconds, pausing momentarily at each extreme to take a breath. |
| Normal breathing | Remain still and breathe normally. |

8. Each exercise is accompanied by a gauge of real time fit factor performance as shown below. If the gauge indicates green then the fit is projected to be better than the pass/fail level you have established for this respirator. If the gauge indicates red then it is projected to be below the pass/fail level. The concentration of particles in ambient air and inside the respirator are also shown.

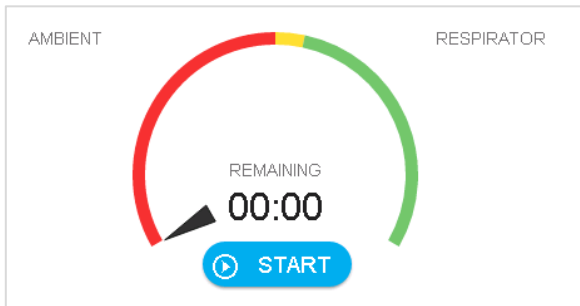

9. The software alerts you when the fit test is complete. It calculates and displays the overall fit factor for the fit test's set of exercises. It provides a clear indication of **Passed** or **Failed** which is determined by comparing the overall fit factor to the Fit Factor Pass/Fail Level.

Test Complete

Passed
The fit test completed normally.

Overall Fit Factor

174464


PRINT RESTART EXIT NEXT

Pass Level

500

| Exercise | Fit Factor |
|---------------------|------------|
| 1 NORMAL BREATHING | 180314 |
| 2 DEEP BREATHING | 290143 |
| 3 HEAD SIDE TO SIDE | 128957 |
| 4 HEAD UP AND DOWN | 327689 |
| 5 TALKING | 286068 |
| 6 GRIMACE | excl. |

10. If the test fails, the following is displayed.

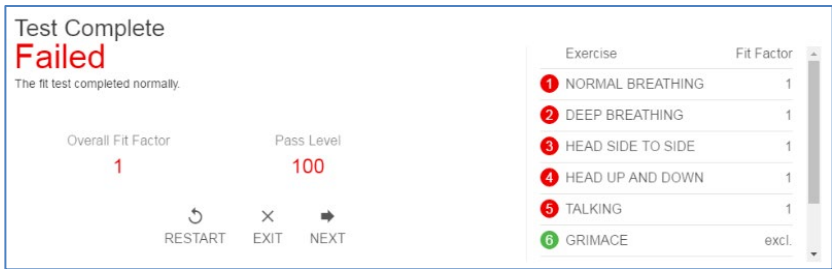

NOTICE

In the USA, OSHA requires a minimum fit factor of 100 for half respirators and 500 for full-face respirators. If necessary, consult the appropriate regulation or standard in your country or geography.

- If the test was a **Pass**, the fit test is over. Also, if the fit test passed, issue that exact size and model respirator to the test subject.
- If the fit test failed, determine the reason and repeat the test. Some common reasons for failure are described below.
- If you are fit testing with a disposable respirator, discard it when the fit test is complete. Probed respirators are intended for fit testing only and are never to be reused. You may be able to sanitize and reuse other types of respirators. Contact the respirator manufacturer for specific information.
- If the fit test is terminated before the last exercise is completed (by pressing **Stop**), the display indicates the test has stopped. No overall fit factor is displayed.

11. You can now begin to test another person by pressing **Next**.

Asynchronous Group Fit Testing

See the following application note for Asynchronous Group Fit Testing: https://www.tsi.com/getmedia/bdc6ac80-88ee-459a-83cb-1af46b3d9cb0/RFT-026_FPU_ASYNC_Group_Fit_Testing_US-web?ext=.pdf.

Common Problems Resulting in Low Fit Factors

Some of the most common problems that result in lower-than-expected fit factors are described below. *Assuming the **PortaCount™** Fit Tester passes the Daily Checks*, explore the following possibilities.

| Problem | Solution |
|---|---|
| <p>Not using high efficiency filters</p> | <p>If high-efficiency class-99 or class-100 filters (P3 for non-USA users) are not being used on the respirator, you may never get a high fit factor. Filters such as class-95, P1 and P2 (for non-USA users) allow some ambient air particles to get through and be interpreted as face seal leakage by the PortaCount™ Fit Tester.</p> |
| | <p>NOTICE</p> |
| | <p>The Model 8048 fit tests lower efficiency respirators including class-95, P1, and P2 filtering-facepieces (disposables).</p> |
| <p>Alcohol cartridge is not tightly inserted or an O-ring is missing</p> | <p>Make sure the alcohol cartridge is installed properly and all O-rings are in position.</p> |
| <p>Starting fit test too soon after respirator is donned</p> | <p>When the respirator is first donned, ambient air particles are trapped inside. These particles clear out as the person breathes. According to all fit testing protocols, a fit test subject must wait 5 minutes after donning the respirator before beginning the fit testing exercises.</p> |
| <p>Sample tubes too long</p> | <p>No more than a few inches should be added to the sample tube (use a Tube Adapter). Longer sample tubes prevent proper purging between the ambient and respirator sample.</p> |
| <p>Leaking respirator probe or fit test adapter</p> | <p>Make certain the respirator probe (if used) or fit test adapter does not leak around the outside.</p> |

| Problem | Solution |
|--|---|
| PortaCount™ Fit Tester sample tube leaks where attached to probe or adapter due to wear | Cut a short piece off the end of the tube to expose a fresh end. |
| Hair interfering with face seal | Make sure there is no hair between the respirator face seal and the individual's skin. |
| Hair or foreign material in exhalation valve | Make sure the exhalation valve is clear. A single hair can make a big difference. |
| Cigarette smoker | DO NOT allow the individual to smoke for at least 30 minutes prior to the fit test. |

Suspiciously High Fit Factors

When fit testing full or half face respirators in most ambient environments, fit factors greater than 100,000 are considered suspicious, and should be verified using the Real-Time FitCheck™ Mode after the fit test has been completed. While still donning the respirator, have the person being fit tested purposefully break the seal of the respirator to their face by sliding an object (i.e., a pen or their finger) through the sealing surface. Even with a small leak, the fit factor calculated should be very low. If the real-time calculated fit factor drops in value as expected, the reported high fit factors are valid. If the real-time calculated fit factor does not drop in value when the seal is broken, there may be a block or kink in the respirator sample or respirator adapter tubing, usually as it enters the respirator.

Record/Print Results

Use **FitPro™** Ultra Fit Test Software to view, save, and print test results. The software will use the default printer of your tablet or computer to print a fit test report.

(This page intentionally left blank)

Manage Data


Import/Export from CSV

FitPro™ Ultra software allows importing and exporting data to and from CSV files.

IMPORTANT NOTICE

FitPro™ Ultra software can import CSV files that have been exported from FitPro+™ software.

To Export to a CSV File

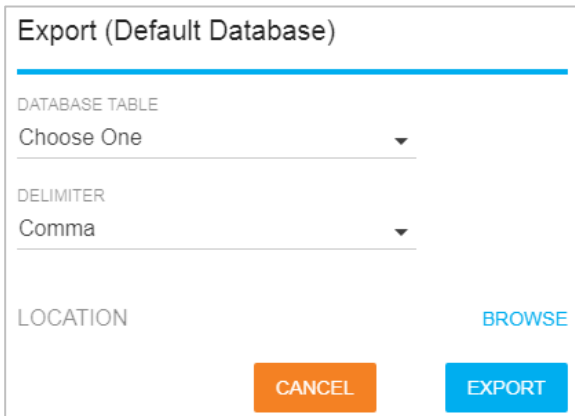




Export (Default Database)

DATABASE TABLE
Choose One


DELIMITER
Comma

LOCATION BROWSE

CANCEL EXPORT

1. Click on , then Data Management.
2. Click  on the database you would like to export data from.
3. Click  Export.

4. Select a database table.

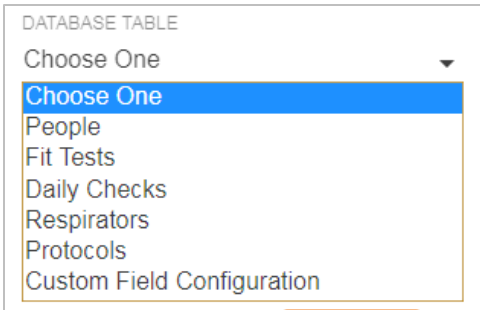

A screenshot of a dropdown menu titled "DATABASE TABLE". The menu is open, showing a list of options: "Choose One", "People", "Fit Tests", "Daily Checks", "Respirators", "Protocols", and "Custom Field Configuration". The "Choose One" option is highlighted with a blue background.

5. Select the delimiter.



A screenshot of a dropdown menu titled "DELIMITER". The menu is open, showing a list of options: "Comma", "Tab", "Space", and "Semicolon". The "Comma" option is highlighted with a blue background.

6. [BROWSE](#) to a location where you want your CSV file to be saved.

7. Define a and click .

8. Click on .

To Import from a CSV File.

Import (Default Database)




DATABASE TABLE
Choose One

DELIMITER
Comma

Overwrite duplicate records in destination database

LOCATION BROWSE

CANCEL IMPORT

1. Click on  then **Data Management**.
2. Click  for the database you would like to import data into then click .
3. Select a database table.

DATABASE TABLE
Choose One

- Choose One
- People
- Fit Tests
- Daily Checks
- Respirators
- Protocols
- Custom Field Configuration

4. Select the delimiter.

DELIMITER
Comma

- Comma
- Tab
- Space
- Semicolon

5. Set Overwrite duplicate records in destination database.

NOTICE: If enabled, records will not be duplicated.

6. Click and navigate to the CSV file you would like to import.
7. Select the CSV file and click .
8. Click .

Multiple Database Support

FitPro™ Ultra supports multiple databases.

1. Click on then .
2. To create a new database, click .
3. To make it the active database, select

 Active Database

4. Enter a name for the database in

5. If you want to connect to an existing **FitPro™** ultra database, select

 Use existing database

6. Select to find an existing database and click on it.
7. To create a new database, ensure that Use existing database is disabled.
8. Select to create a new database.

9. Enter notes about the database in

NOTES

ENTER NOTES HERE...
_____ /

10. Click on **SAVE**.

The “New Database” screen is shown below.

New Database

Active Database

NAME (REQUIRED)

Use existing database

LOCATION (REQUIRED)
C:\Users\Public\Documents\TSl\fitpro\mydb.d [BROWSE](#)




NOTES


ENTER NOTES HERE...
_____ /

CANCEL **SAVE**

Custom Fields

FitPro™ Ultra software supports custom labels and fields for fit test history records.

1. Click on  then **Data Management**.
2. Click  for the database you would like to create custom labels and fields for, then click  **Custom Fields**.
3. Click **NEW CUSTOM FIELD**.
4. Type a label for the custom field in

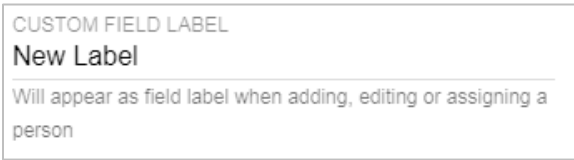


CUSTOM FIELD LABEL

New Label

Will appear as field label when adding, editing or assigning a person

5. Configure the new field as either a drop-down or text input in

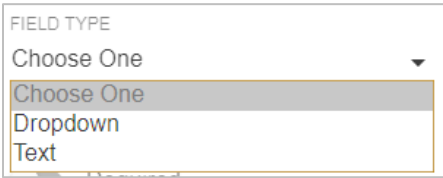

FIELD TYPE

Choose One ▼

Choose One

Dropdown

Text

6. For Text custom fields:
 - Fit Test Operators will enter text manually for the person being fit tested.
7. For drop-down custom fields:
 - a. Fit Test Operators will be given options to choose from for the person being fit tested.

b. To configure custom field drop-downs:


1.) Enter values that can be chosen in

Dropdown Options

Option Label

NEW OPTION 

2.) To add another, click [NEW OPTION](#) and repeat.

3.) To delete an option, click  for the option.

(This page intentionally left blank)

Preventive Maintenance, Service, and Troubleshooting

Maintenance

Recalibration Interval

TSI® recommends that the **PortaCount™** Models 8040 and 8048 Respirator Fit Testers be cleaned and recalibrated annually. Try to arrange your fit testing schedule to allow for annual factory recalibration. If you have a fit testing schedule that is seasonal or you expect heavy usage during an upcoming period (such as an outage), TSI® recommends that you have the **PortaCount™** Fit Tester serviced prior to that time. TSI® Incorporated's Customer Service Department provides fast service in order to minimize your down time. Contact TSI® on the Internet at www.tsi.com or send e-mail to PortaCount@tsi.com.

Status Messages

Status messages can be displayed by the **PortaCount™** Model 8040 and 8048 Respirator Fit Testers.

| Message | Description |
|-----------------------------|--|
| Low Particle Message | <p>The PortaCount™ Fit Tester is factory programmed not to allow fit testing when the ambient particle concentration is below 350 particles/cm³ for the Model 8040 or 8048 when testing respirators with 99% efficiencies or greater, and 30 particles/cm³ for the Model 8048 when testing respirators with <99% efficiencies. If the ambient sample during a Fit Test or during a Daily Check is below these levels, the "Low Particle" message appears and the test is automatically terminated.</p> <p>Consult Chapter 8, "Troubleshooting" if necessary.</p> |

| Message | Description |
|--|--|
| <p>High Concentration Message</p> | <p>When the “High concentration message” is displayed, it means that the PortaCount™ Fit Tester detects ambient concentration levels higher than recommended. Prolonged exposure to excessive concentration levels could degrade the performance of the PortaCount™ Fit Tester over time, resulting in failed daily checks or a “Low Particle” message. This message does not necessarily mean that the PortaCount™ Fit Tester will stop working soon. Fit test results are accurate even when this message is displayed. Refer to Chapter 8, "Troubleshooting" for other possible causes and solutions for this message.</p> |
| <p>Low Alcohol Level Message</p> | <p>When the "Low Alcohol Level" message is displayed, it means that the PortaCount™ Fit Tester may be low on alcohol. This message does not necessarily mean that the PortaCount™ Fit Tester will stop working soon. Fit test results are accurate even when this message is on. Refer to Chapter 8, "Troubleshooting" for other possible causes and solutions for this message.</p> |

Shipping & Storage Precautions

When transporting or storing the **PortaCount™** Respirator Fit Tester, it is important to remove all alcohol. Transporting or storing the **PortaCount™** Fit Tester with the alcohol cartridge inside may cause flooding of the optics.

When putting the **PortaCount™** Fit Tester back into the carrying case, follow the steps outlined below:

1. Remove the alcohol cartridge from the **PortaCount™** Fit Tester and store it in the alcohol fill capsule. The alcohol fill capsule is designed to be a safe transportation and storage container for alcohol. The alcohol cartridge can be left soaking in alcohol indefinitely.
2. Cover the cartridge cavity with the storage cap. Installing the storage cap into the cartridge cavity prevents dirt or debris from getting inside the **PortaCount™** Fit Tester.

NOTICE

NEVER ship the **PortaCount™** Fit Tester back to TSI® with any alcohol bottles. Isopropyl Alcohol is a hazardous material and must not be shipped without appropriate Dangerous Goods labeling and packaging.

Changing the Alcohol Wick

The wick inside the alcohol cartridge may be changed in the field. Two spare wicks are included with the **PortaCount™** Fit Tester. Normally, the wick does not need to be changed unless one of the following problems develops:

- Moisture accumulates in the wick and causes the Low Alcohol Level message to come on even when there is an adequate alcohol supply. This may happen when the **PortaCount™** Fit Tester is used extensively for extended periods. Especially if fit testing in an area with high humidity.

If moisture accumulation occurs, the alcohol wick can be removed, allowed to dry overnight in a well-ventilated area, and then re-installed into the alcohol cartridge.

- The wick becomes contaminated with dirt, oil, or other foreign substances. This should not happen unless the instrument is used to sample aerosols other than those normally found in ambient air.

If the alcohol wick is contaminated, discard it and replace it with a new one. Note that some discoloration of the wick is normal and will not influence performance.

To remove the alcohol wick from the alcohol cartridge:

1. Grasp the cartridge with both hands. With the knob in one hand and the wick retainer cap in the other, twist and pull apart the assembly. The cartridge should snap apart exposing the end of the white alcohol wick.



2. After separating the two halves, push the alcohol wick out of the wick retainer cap from the opposite end. **DO NOT** use a pencil point because bits of lead could break off.



3. Examine the white alcohol wick. Discard wicks that are severely discolored or physically damaged. Some light brownish-yellow discoloration of the wick is normal.

If the wick is in good condition, dry it by placing it on a clean surface in a well-ventilated area and allow it to dry for 16 hours.

4. Before re-installing the alcohol wick, make certain that all parts are clean. Small bits of the wick or debris can cause serious problems if they get into the **PortaCount™** Fit Tester.
5. Inspect the inside surfaces of the alcohol cartridge and the wick retainer cap. Blow air into them, if necessary, to make certain that there are no dust particles present.
6. Blow air onto all surfaces of the alcohol wick that will be used to make certain that any loose particles that may have shed from the wick are removed.
7. Check both ends of the wick. If one end is smoother than the other, slide the smooth end of the wick into the wick retainer cap first. Otherwise, simply insert the wick and push firmly until the wick hits bottom.
8. Blow everything off again.

- Align the two halves of the alcohol cartridge and press firmly until they snap together.



Operation in High Humidity

When using **PortaCount™** Model 8040/8048 in a high humidity environment, the wick assembly will retain water moisture more rapidly than normal and will require more frequent wick replacements. Water moisture collecting in the wick is a normal occurrence, but is greatly increased with a rise in humidity. Under normal conditions with a dry wick freshly charged with isopropyl alcohol, the **PortaCount™** Fit Tester will operate approximately five hours before the “Low Alcohol Message” appears. This average run time will start to decrease when operating the **PortaCount™** Fit Tester in higher humidity. To keep this average run time as long as possible, replace the wick each day with a dry one. To dry out the wick you removed from the **PortaCount™** Fit Tester, place it in a well-ventilated area that has a humidity level of 50% or lower and let it set overnight (approximately 16 hours).

The wick should then be dry and ready to use again. The 16-hour dry time is based on an 8-hour operation in a humid environment. The total dry time will vary depending on the number of operation hours on the wick in high humidity environment.

Nozzle Cleaning

If the small (pin-hole size) internal nozzle becomes clogged with lint or other debris, the following procedure should clear it. The symptom of a clogged nozzle is a low (perhaps zero) ambient particle count. This usually, but not always, causes the Particle Check and/or Max Fit Factor Check to fail. There are two procedures. Perform Procedure A first, then Procedure B if necessary.

Procedure A

Obtain a source of clean compressed gas, such as Chemtronics® or equivalent. It must have a long nozzle (straw) in order to reach deep into the **PortaCount™** Respirator Fit Tester.



- Turn the **PortaCount™** Fit Tester off and remove the alcohol cartridge.
- Insert the long nozzle inside the **PortaCount™** Fit Tester as shown. Keep the end of the nozzle centered in the cavity and gently push it in as far as possible. The internal nozzle is located just at the far end of the cavity and cannot be seen.
- Apply two or three bursts of gas. This will not damage the **PortaCount™** Fit Tester.



Reinsert the alcohol cartridge.
Turn the **PortaCount™** Fit Tester on.
Perform the Daily Checks.
If the problem persists,
try Procedure B.

Procedure B

Use this procedure only if Procedure A fails to clear the internal nozzle.

- Turn the **PortaCount™** Fit Tester off and remove the alcohol cartridge.
- Turn and hold the **PortaCount™** Fit Tester up on end so that you can look down into the cartridge cavity.
- Take a bottle of the alcohol used to operate the **PortaCount™** Fit Tester and drip 3 to 4 drops down into the cartridge cavity. Try to keep the drops centered so they hit the bottom without touching the sides. **DO NOT** use too much. One drop is enough if it all reaches the nozzle.

- Keep the **PortaCount™** Fit Tester in this vertical position for about five minutes so the alcohol can soften or dissolve the blockage.

Put the **PortaCount™** Fit Tester down in normal operating position and perform Procedure A.



Troubleshooting

This section lists a series of symptoms, their possible causes and recommended solutions for problems with the **PortaCount™** Fit Testers. If your symptom is not listed, or if none of the solutions solve your problem, please contact TSI® Technical Service. Additional help is available from the TSI® Web site www.tsi.com or by sending an e-mail to PortaCount@tsi.com.

Always replenish the alcohol supply as the first step in solving a problem. Alcohol can be added to the fill line at any time.

Eventually, the alcohol wick inside the alcohol cartridge will absorb enough moisture to prevent proper operation. Symptoms of excess moisture are low particle counts even though there is plenty of alcohol and plenty of particles in the room, and also having to frequently replenish the alcohol supply (such as every hour or less). Changing the alcohol wick is the best way to solve the problem. The wick can also be dried by leaving the alcohol cartridge in the **PortaCount™** Fit Tester and then running it overnight, or by removing the wick from the cartridge and letting it dry for 16 hours.

Always perform the Daily Checks as described in [Chapter 4](#) as the first troubleshooting step. Passing the Daily Checks usually indicates that the **PortaCount™** Fit Tester is working properly and that the problem is elsewhere, such as the connection to the respirator and/or the respirator itself.

On-line Troubleshooting Guides

Additional application notes on troubleshooting are located on the **FitPro™** Ultra Software or visit TSI® Incorporated's [website](#).

| Symptom | Possible Causes | Solution |
|---|--|--|
| PortaCount™ Fit Tester status indicator is red | Hardware error | Prepare to return the unit for service. |
| PortaCount™ Fit Tester status indicator is yellow; during a measurement FitPro™ Ultra displays a message concerning low alcohol | Alcohol in wick is low. | Replenish alcohol |
| Low Particle message | Low on alcohol. | Replenish alcohol. |
| | Hoses are reversed on Twin Tube Assembly. | Verify the hoses are connected properly to the PortaCount™ Fit Tester and respirator. |
| | Wrong tube is connected to respirator. | Connect the proper tube to the respirator (clear tube). |
| | Twin Tube Assembly is kinked, pinched, or blocked. | Straighten out the Twin Tube Assembly or remove the obstruction. |
| | Particle count in area really is low. | Move to another location or use a particle generator (such as TSI® Model 8026 Particle Generator or an ultrasonic humidifier). |

| Symptom | Possible Causes | Solution |
|-------------------------------------|---|---|
| Low Particle message (continued) | Moisture build-up inside PortaCount™ Fit Tester. | Change alcohol wick inside the Alcohol Cartridge. Dump old alcohol from the Alcohol Fill Capsule and add fresh alcohol. Run two hours to dry optics (remove the alcohol cartridge and install storage cap). |
| | Inferior or contaminated alcohol. | Change Alcohol Wick inside the Alcohol Cartridge. Use only approved alcohol (99.5 % or better isopropyl). |
| | Plugged internal nozzle. | See Nozzle Cleaning in the Service and Maintenance chapter. |
| | Unit needs recalibration and cleaning. | Return the instrument to TSI® for service. |
| Does not switch on | AC Adapter not plugged into unit or AC outlet. | Connect AC adapter. |
| Fails Zero Check | Alcohol Cartridge is loose. | Tightly close the Alcohol Cartridge. |
| | Twin Tube Assembly leaks. | Repair or replace the Twin Tube Assembly. |
| | Filter leaks | Repeat the test with a different filter. |
| | Ends of Twin Tube Assembly are poorly sealed. | Cut off the worn ends on the Twin Tube Assembly. |
| | Twin Tube Assembly is disconnected. | Connect the Twin Tube Assembly to the PortaCount™ Fit Tester. |
| | Slightly flooded with alcohol. | Remove Alcohol Cartridge and run for 15 minutes, then try again. |
| | Switching valve is not functioning. | Return to TSI® for service. |

| Symptom | Possible Causes | Solution |
|--|--|--|
| Fails Zero Check (continued) | O-ring on alcohol cartridge is not sealing. | Replace O-ring. Smear a very small amount of grease (such as petroleum jelly) on the O-ring. |
| | Tube fittings on PortaCount™ Fit Tester are loose. | Tighten fittings with pliers. |
| Fit factor of 1 or very low (If the PortaCount™ Fit Tester passes the Daily Checks, the problem is with the respirator, not the PortaCount™ Fit Tester) | Respirator is not equipped with HEPA, class-99, class-100, or P3 filters. | Install proper filter for fit testing. |
| | Respirator leaks, has loose filters, or a malfunctioning exhalation valve. | Repair the respirator. |
| | Twin Tube Assembly is disconnected. | Connect the Twin Tube Assembly to the PortaCount™ Fit Tester. |
| | Twin Tube Assembly is not connected to respirator sampling port. | Connect the Twin Tube Assembly to the respirator sampling port (clear tube). |
| | Twin Tube Assembly leaks. | Repair or replace the Twin Tube Assembly. |
| | Sample Tube too long. | Use standard five-foot Twin Tube Assembly. |
| | PortaCount™ Fit Tester is flooded with alcohol. | Run two hours to dry optics (remove the Alcohol Cartridge and install Storage Cap). |
| | Alcohol level is low. | Add alcohol to the PortaCount™ Fit Tester. |
| Switching valve is not functioning. | Return to TSI® for service. | |

| Symptom | Possible Causes | Solution |
|--|---|--|
| <p>Suspicious readings</p> <p>(If the PortaCount™ Fit Tester passes the Daily Checks, the problem is the respirator, not the PortaCount™ Fit Tester)</p> | PortaCount™ Fit Tester is flooded with alcohol. | Run two hours to dry the optics (remove cartridge and install storage cap). |
| | Tube fittings on PortaCount™ Fit Tester are loose. | Tighten with pliers. |
| | PortaCount™ Fit Tester leaks. | Zero-Check the PortaCount™ Fit Tester and fix any leaks. |
| | Sample lines too long. | Use standard five-foot Twin Tube Assembly. |
| | Alcohol Cartridge is loose. | Tightly close the Alcohol Cartridge. |
| | Respirator is not equipped with HEPA filters. | Install HEPA filters for fit tests. |
| | Twin Tube Assembly is kinked, pinched, or blocked. | Straighten out the Twin Tube Assembly or remove the obstruction. |
| | Leaking respirator probe. | Tighten or seal probe. |
| | Tubing in fit test adapter is kinked or pinched. | Straighten out tubing. |
| | Respirator is faulty. | Fix or replace the respirator. |
| <p>Suspiciously High Fit Factors</p> <p>Refer to Suspiciously High Fit Factors section.</p> | <p>Twin Tube Assembly is kinked, pinched, or blocked.</p> | <p>Use the real-time fit factor function to verify the fit factor.</p> <p>Straighten out the Twin Tube Assembly or remove the obstruction.</p> |

| Symptom | Possible Causes | Solution |
|---|--|--|
| Particle count is zero or near zero | Alcohol level is low. | Replenish alcohol. |
| | Sampling through HEPA Filter. | Remove filter. |
| | Twin Tube Assembly is blocked. | Remove the blockage. |
| | Moisture buildup in Alcohol Wick. | Change Alcohol Wick inside Alcohol Cartridge. Run two hours to dry optics (remove the alcohol cartridge and install storage cap). |
| | Inferior or contaminated alcohol. | Change Alcohol Wick inside the Alcohol Cartridge. Use only approved alcohol. |
| | PortaCount™ Fit Tester is flooded with alcohol. | Run two hours to dry optics (remove Alcohol Cartridge and install Storage Cap). |
| | Filter cover leaking. | Replace cover and O-ring. |
| | Plugged nozzle. | See Nozzle Cleaning in Service and Maintenance chapter. |
| Requires frequent refill of alcohol (every hour or less) | Moisture build-up inside Alcohol Wick. | Change Alcohol Wick inside cartridge. Run two hours to dry optics (remove the alcohol cartridge and install storage cap). Use only approved alcohol. |
| Alcohol visible in Twin Tube Assembly or coming out of Exhaust Port | PortaCount™ Fit Tester is flooded with alcohol. | Run overnight to dry optics (remove alcohol cartridge and install storage cap). |

| Symptom | Possible Causes | Solution |
|---|---|--|
| High Concentration message | A near-by particle generator is elevating ambient concentration levels. | Turn off or turn down any particle generators operating in the vicinity such as humidifiers or the TSI® Model 8026 Particle Generator. Keep all forms of particle generation at least 6 ft (1.8 m) from the PortaCount™ Fit Tester during fit testing. |
| | The room ventilation system is reduced or turned off. | Increase room ventilation. |
| | Ambient concentration is naturally elevated. | In situations where the ambient concentration is elevated through pollution, construction, or other means where it cannot be controlled, the trigger threshold for the message may be raised. Note that prolonged exposure to excessive particle concentration levels could degrade the performance of the PortaCount™ Fit Tester over time, requiring more frequent maintenance. |
| FitPro™ Ultra Software does not show a connection to the PortaCount™ Fit Tester | USB connectivity issue | Verify the PortaCount™ Fit Tester is turned on and connected with USB cable. |
| | Wi-Fi® is not enabled on the PortaCount™ Fit Tester | Verify a Wi-Fi® dongle is plugged into the USB-A port on the back of the PortaCount™ Fit Tester |
| | Tablet or Laptop is not Wi-Fi® capable | Verify your tablet or computer settings |

| Symptom | Possible Causes | Solution |
|--|-------------------------------|---|
| <p>If FitPro™ Ultra software running on a device (i.e., computer or tablet) loses communication to the PortaCount™ Fit Tester while using USB HUB (804004) or USB Extender Cable (804005)</p> | <p>USB connectivity issue</p> | <p>Option 1</p> |
| | | <p>Unplug the affected USB cable from the USB HUB for 3 seconds, plug it back in and reconnect FitPro™ Ultra software from your device to PortaCount™ Fit Tester.</p> |
| | | <p>Option 2</p> |
| <p>Unplug the USB HUB from the Computer for 3 seconds, plug it back in and reconnect to FitPro™ Ultra software to all PortaCount™ Fit Testers in use. DO NOT unplug the USB HUB if you have other PortaCount™ Fit Testers running fit tests; otherwise, your fit tests will be terminated.</p> | | |

APPENDIX A

Specifications

(Specifications are subject to change.)

Model 8040 PortaCount™ Respirator Fit Tester

| | |
|--|---|
| Size (W x D x H) | 9.5 x 8.5 x 6.75 in. (24 x 22 x 17 cm) |
| Weight | |
| Unit only | ≤5.0 lb. (2.3 kg) |
| With standard accessories and case..... | 16.0 lb. (7.26 kg) |
| Fit Factor Range | 1 to greater than 10,000 |
| Concentration Range | 0.01 to 2.5 x 10 ⁵ particles/cm ³ |
| Particle Size Range | 0.02 to greater than 1 micrometer |
| Temperature Range | |
| Operation | 32 to 100°F (0 to 35°C) |
| Storage | -40 to 160°F (-40 to 70°C) |
| Flow Rate | |
| Sample..... | 350 cm ³ /min |
| Total | 1,000 cm ³ /min (nominal) |
| Power Requirements | 100 to 250 VAC, 50 to 60 Hz |
| Alcohol | |
| Hours per charge | 6 hours at 70°F (21°C) |
| Alcohol type | Reagent grade isopropyl (99.5% or better) |
| Carrying Case | |
| Size (W x D x H) | 19.5 x 13.7 x 9.0 in. (50 x 35 x 23 cm) |
| Pass/Fail Settings | User-selectable: 0 to 10000 |
| Communications | Wi-Fi®, USB-C, USB-A |

| | |
|---|---|
| <p>Minimum PC Hardware Requirements for FitPro™ Ultra Fit Test Software.....</p> | <p>Windows® 7 (32- and 64-bit) or Windows® 10 (32- and 64-bit) operating system</p> <ul style="list-style-type: none"> ■ Microsoft.Net version 4 (installation software will install Microsoft.Net if necessary) <p>NOTICE: An internet connection is required to install Microsoft.Net</p> <ul style="list-style-type: none"> ■ ≥1 GHz processor ■ ≥1280 x 800 screen resolution monitor ■ 500 MB free space on hard drive ■ 1 free USB port <p>Minimum Tablet requirements:</p> <ul style="list-style-type: none"> ■ Windows® 10 operating system ■ USB port (for initial set up) |
| <p>Software</p> | <p>FitPro™ Ultra Software featuring advanced user interface, animated graphics, and interactive troubleshooting guide</p> |
| <p>Factory Recalibration Interval</p> | <p>One year</p> |
| <p>Warranty</p> | <p>Two years on workmanship and materials</p> |

Respirator Facepieces that can be Fit Tested

- Full-face elastomeric
- Half-face elastomeric
- NIOSH series-100 filtering-facepiece
- NIOSH series-99 filtering-facepiece
- FFP3 filtering- facepiece

Fit Factor Measurement

Direct measurement of fit factor (C_{out}/C_{in})
(Respirator leakage is measured simultaneously
while test subject moves and breathes.)

Model 8048 PortaCount™ Respirator Fit Tester

| | |
|---|---|
| Size (W x D x H) | 9.5 x 8.5 x 6.75 in. (24 x 22 x 17 cm) |
| Weight | |
| Unit only | ≤6.8 lb. (3.1 kg) |
| With standard accessories and case | 18.0 lb. (8.2 kg) |
| Fit Factor Range | 1 to greater than 10,000; 1 to 200 for < 99% efficiency respirators |
| Concentration Range | 0.01 to 2.5 x 10 ⁵ particles/cm ³ |
| Particle Size Range | 0.02 to greater than 1 micrometer |
| Temperature Range | |
| Operation | 32 to 100°F (0 to 35°C) |
| Storage | -40 to 122°F (-40 to 55°C) |
| Flow Rate | |
| Sample | 350 cm ³ /min |
| Total | 1000 cm ³ /min (nominal) |
| Power Requirements | Autosensing 100 to 250 VAC, 50 to 60 Hz |
| Alcohol | |
| Hours per charge | 6 hours at 70°F (21°C) |
| Alcohol type | Reagent grade isopropyl (99.5% or better) |
| Carrying Case | |
| Size (W x D x H) | 19.5 x 13.7 x 9.0 in. (50 x 35 x 23 cm) |
| Pass/Fail Settings | User-selectable: 0 to 200 |
| Communications | Wi-Fi®, USB-C, USB-A |

| | |
|---|---|
| <p>Minimum PC Hardware Requirements for FitPro™ Ultra Fit Test Software.....</p> | <p>Windows® 7 (32- and 64-bit) or Windows® 10 (32- and 64-bit) operating system</p> <ul style="list-style-type: none"> ■ Microsoft.Net version 4 (installation software will install Microsoft.Net if necessary) <p>NOTICE: An internet connection is required to install Microsoft.Net</p> <ul style="list-style-type: none"> ■ ≥1 GHz processor ■ ≥1280 x 800 screen resolution monitor ■ 500 MB free space on hard drive ■ 1 free USB port <p>Minimum Tablet requirements:</p> <ul style="list-style-type: none"> ■ Windows® 10 operating system ■ USB port (for initial set up) |
| <p>Software</p> | <p>FitPro™ Ultra Software featuring advanced user interface, animated graphics, and interactive troubleshooting guide</p> |
| <p>Factory Recalibration Interval</p> | <p>One year</p> |
| <p>Warranty</p> | <p>Two years on workmanship and materials</p> |

Respirator Facepieces that can be Fit Tested

- Full-face elastomeric
- Half-face elastomeric
- NIOSH series-100 filtering-facepiece
- NIOSH series-99 filtering-facepiece
- NIOSH series-95 filtering-facepiece (Model 8048 required)
- FFP3 filtering- facepiece
- FFP2 filtering- facepiece (Model 8048 required)
- FFP1 filtering- facepiece (Model 8048 required)

Fit Factor Measurement

Direct measurement of fit factor (C_{out}/C_{in})
(Respirator leakage is measured simultaneously
while test subject moves and breathes.)

PortaCount™ Fit Testers provide fit testing compliant with
DIN ISO 16975-3, OSHA 29CFR1910.134, ANSI/ASTM Z88.10-2001,
CSA Z94.4-2011 and HSE INDG 479.

NOTICE

Electrically noisy power networks in a building can cause USB communication drop outs for USB HUB (804004) and USB Extender Cable (804005). These types of emitted electrical noise can be introduced by equipment that draws high current or by environmental conditions such as lightning. These conditions will not harm the **PortaCount™** Models 8040 or 8048. USB communications over USB HUB (804004) and USB Extender Cable (804005) are trustworthy once the electrical noise is reduced or stops.

(This page intentionally left blank)

The Rainbow Passage

When the sunlight strikes raindrops in the air, they act like a prism and form a rainbow. The rainbow is a division of white light into many beautiful colors. These take the shape of a long round arch, with its path high above, and its two ends apparently beyond the horizon. There is, according to legend, a boiling pot of gold at one end. People look, but no one ever finds it. When a man looks for something beyond his reach, his friends say he is looking for the pot of gold at the end of the rainbow.

Fairbanks, G. 1960 "Voice and Articulation Drill Book." Harper & Row, New York.



Knowledge Beyond Measure.

TSI Incorporated – Visit our website www.tsi.com for more information.

USA Tel: +1 800 680 1220
UK Tel: +44 149 4 459200
France Tel: +33 1 41 19 21 99
Germany Tel: +49 241 523030

India Tel: +91 80 67877200
China Tel: +86 10 8219 7688
Singapore Tel: +65 6595 6388

P/N 6010633 Rev. H

©2025 TSI Incorporated

Printed in U.S.A.

