

BASE TEMPERATURE PROBE

INSTALLATION INSTRUCTIONS

P/N 6006027 REV B
FEBRUARY 2016



START SEEING THE BENEFITS OF REGISTERING TODAY!

Thank you for your TSI instrument purchase. Occasionally, TSI releases information on software updates, product enhancements and new products. By registering your instrument, TSI will be able to send this important information to you.

<http://register.tsi.com>

As part of the registration process, you will be asked for your comments on TSI products and services. TSI's customer feedback program gives customers like you a way to tell us how we are doing.



UNDERSTANDING, ACCELERATED

TSI Incorporated - Visit our website **www.tsi.com** for more information.

USA	Tel: +1 800 874 2811	India	Tel: +91 80 67877200
UK	Tel: +44 149 4 459200	China	Tel: +86 10 8219 7688
France	Tel: +33 1 41 19 21 99	Singapore	Tel: +65 6595 6388
Germany	Tel: +49 241 523030		

©2015 TSI Incorporated

Printed in U.S.A.

Included Parts


Description	Qty
THERMSTOR PROBE W/ 7POS MINIDIN 100K	1
MICROMANOMETER	1
INSTALLATION INSTRUCTIONS	1

New Temperature Probe/Micromanometer Installation

1. Locate and unplug custom cable and thermister probe cord from meter display.



2. Pinch strain relief bushing and push through the base hole.

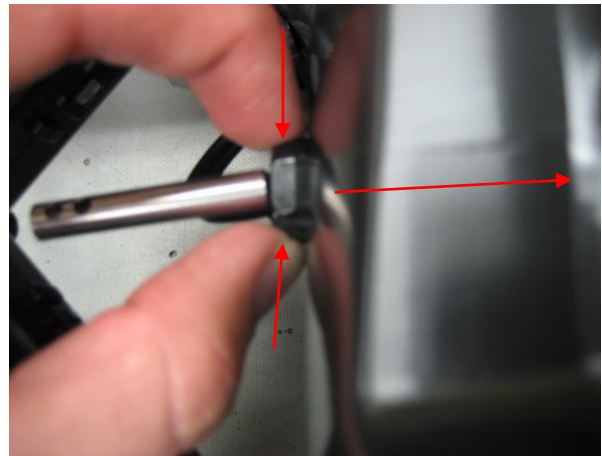


3. Open the strain relief bushing and remove the thermister probe cord only.



4. Locate new thermister probe and insert it into the strain relief bushing.



5. Close the strain relief bushing and press through the base hole, snapping it into place.

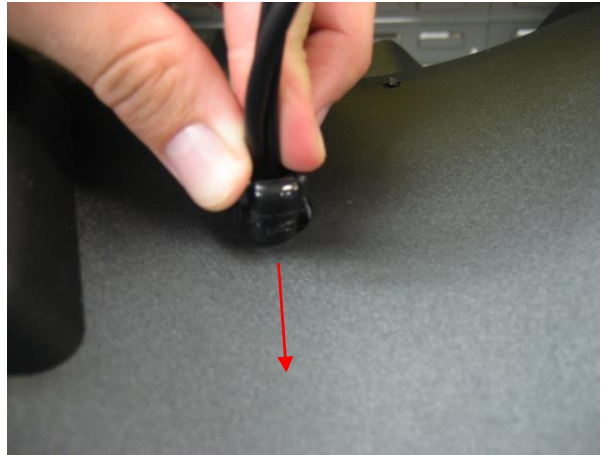

6. Locate the micromanometer and insert into the micromanometer port in the base. Snap in to secure.



7. Locate custom cable and thermister probe cord and insert them into their respective ports in the micromanometer.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA	Tel: +1 800 874 2811	India	Tel: +91 80 67877200
UK	Tel: +44 149 4 459200	China	Tel: +86 10 8219 7688
France	Tel: +33 1 41 19 21 99	Singapore	Tel: +65 6595 6388
Germany	Tel: +49 241 523030		

P/N 6006027 Rev B

©2016 TSI Incorporated

Printed in U.S.A.

