

# Group Fit Test Mode

More tests done in less time with the PortaCount™ Respirator fit tester



For fit test administrators, Group Fit Testing Mode saves personnel hours by allowing four people to be tested at the same time. That means efficiency and reduced overhead.

- Save hours and labor costs by administering more tests at the same time
- Each fit test is independent. Start and stop times and respirator types can be different for each test
- One administrator can monitor up to four instruments from a single control screen
- Personalized screens separately guide respirator wearers through the fit test
- Available with the new PortaCount™ Respirator Fit Tester models 8040 and 8048

[tsi.com/portacount4](https://tsi.com/portacount4)  
or call technical services at 1-800-874-2811




Knowledge Beyond Measure.



**Reduce fit test hours by 50% or more**

## Group Fit Test Mode

Reduces the number of hours and test administrators needed to fit test your staff.

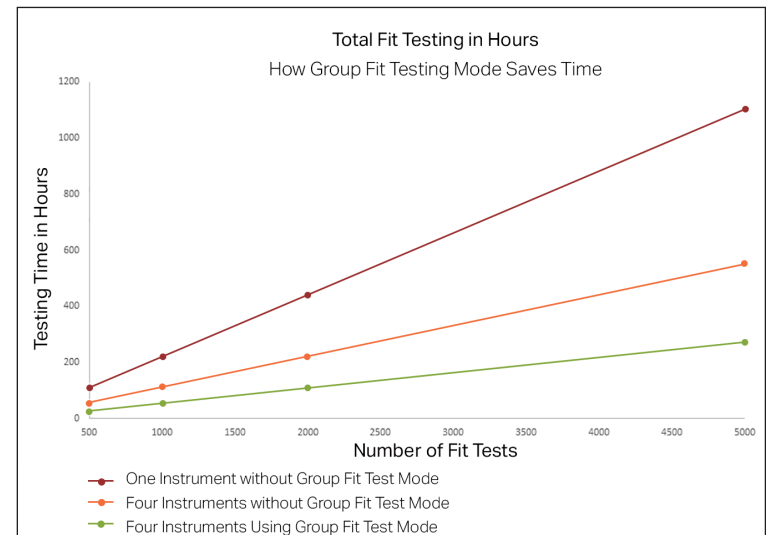

Estimated time saved with and without Group Fit Test Mode using PortaCount™ 8048

# Group Fit Test Mode

## How It Works

**Group Fit Test Mode allows users to connect up to four instruments using a simple USB hub and run four separate fit tests from one control screen.**

### Can I test more than one respirator type at a time?

Yes. For example, one unit could be set up for testing employees on N95s respirator while another can be set up with a full-face respirator, etc...

### Can I use Group Fit Test Mode with fewer than four PortaCounts?

You can use Group Fit Test Mode with fewer than four instruments, or even a single instrument.

### Does it work for any Protocol?

PortaCounts can fit test any respirator type, make, model or rating.

### How many administrators do I need?

You only need one administrator.

### Can I also use my old PortaCount™ with a new instrument for group fit testing?

Group Fit Test Mode works only with fourth generation PortaCount™ Fit Tester models 8040 and 8048.

### Where is the data from each PortaCount™ saved?

#### Do I have to keep data separate for each instrument?

All records are consolidated into a single database, accessed by the primary computer running FitPro™ Ultra Fit Test Software.

### How do I get started?

Contact your current sales representative, visit <http://www.tsi.com/portacount4> or call technical services at 1-800-874-2811

TSI, and the TSI logo are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.



Knowledge Beyond Measure.