




® Knowledge  
Beyond  
Measure.

# Performance Beyond Measure

AirPro® Solutions



# AirPro® Solutions

## Performance Beyond Measure

Utilizing everyday Android™ and iOS® smart devices, the next level of performance for ventilation test instruments has arrived. AirPro® Solutions is comprised of wireless test instrumentation, the AirPro® Mobile App, an online device manager and flexible service offerings.



### AirPro® Mobile

AirPro® Mobile, a TSI developed application software, is the heart of any AirPro Instrument. The app allows for real-time measurements to be displayed and logged on iOS® or Android™ smart handheld devices. Unlike many other apps that only display measurements and have limited functionality, AirPro Mobile does it all:

- Simultaneous measurement, calculation, and display of readings
- Simplified instrument setup, configuration, and operation
- Seamless multi-data reporting
- User-friendly interface
- Guided workflows

### Wireless Test Instrumentation

The AirPro instrumentation family includes a rugged and compact micromanometer (AP800) and air velocity meter (AP500). Communicate wirelessly in real-time with the AirPro Mobile App, which can be set up to run on your preferred mobile handheld device. Models AP800 and AP500 feature integrated displays, power and save buttons, and a rechargeable lithium-ion battery. In addition, both models provide internal storage for use in long- or short-term unattended data-logging applications, via SD card.



## License Manager

My.TSI.com is a portal to the AirPro License Manager website, allowing you to manage your user accounts, instruments, and smart devices along with access to your latest calibration dates.

My TSI enables you to:

- Manage AirPro Mobile feature sets and subscription levels
- View registered instruments and probes
- Manage smart device connections and user accounts
- View factory-recommended recalibration dates

## Flexible Service Offerings

TSI offers a diverse selection of service offerings for AirPro instrumentation and probes, helping to eliminate downtime.

- Service reminder notifications
- Standard calibration and repair services
- 3- and 5-year calibration contracts

# AirPro® Mobile Feature Sets

The AirPro® Mobile software supports both Android™ or iOS® smart devices and is available in three levels of performance – Basic, Advanced and Professional.



## Basic

FREE, Basic Measurements and Displays (Included with initial AirPro Mobile App Download)


## Advanced

Basic Features plus Measurement Calculations, Simultaneous Probes (2), and Data Logging

## Professional

Basic and Advanced Features plus Simultaneous Probes (6), Work Flow Operations, and Remote Logging

	Basic	Advanced	Professional
Display Readings	■	■	■
Probe Configurations	■	■	■
Min-Max		■	■
Average		■	■
Velocity Calculation from Differential Pressure	■	■	■
Multiple Units of Measure	■	■	■
Dew Point/Wet Bulb		■	■
Flow Calculations		■	■
Correction/Offset Factors		■	■
Data Logging		■	■
Simultaneous Probes		2	6
Email/Cloud		■	■
Store Data on Probe's SD Card for Importing			■
Graphing			■
Applications — Duct Traverse			■
Calibration Certificate Viewable from App			■

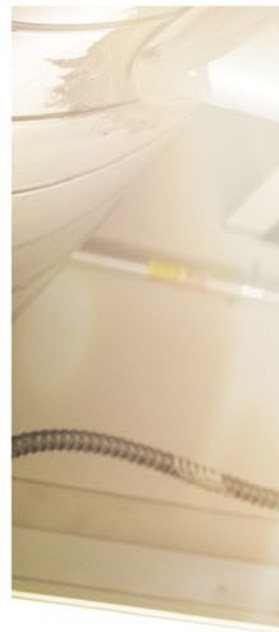



## Trusted Performance


AirPro® Instruments are the latest iteration of trusted, high performance TSI® ventilation test instruments, designed and manufactured by the leader in the industry. Don't get caught compromising your credibility, or the health and safety of others. Trust TSI® as your critical measurements solution provider.



## Manage Your Devices

Log into My TSI® to manage user accounts, instruments and smart devices, with access to your latest calibration certificates.



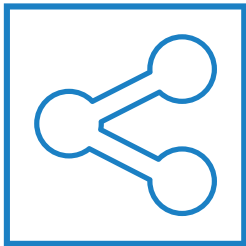


## Share Your Data

With the touch of a button, AirPro Mobile allows you to quickly share measurements, photos and comments that can easily be imported into reports.




## Seamless Connectivity

Connect up to six instruments simultaneously to one smart device, for remote measurement display and data logging. When your mobile device goes out of range, it will automatically re-connect to the instruments once you're back in range.



# Increase Your Productivity

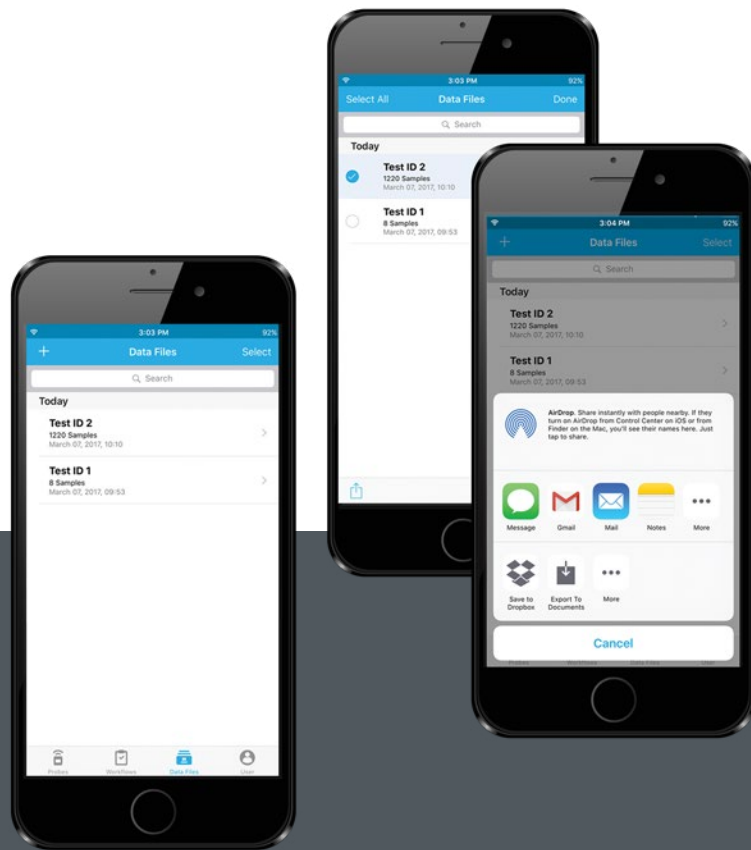

## Boost Efficiency

Don't waste time writing down numbers and performing manual calculations. Let AirPro Mobile do it for you.

- Minimize errors
- Perform duct traverse workflows
- Perform unit conversions



## Protect Your Investment

Protect your investment with flexible service offerings and extended calibration contracts, ultimately saving costs and eliminating downtime.

**VELOCITY**

Feature Set

Service

Pressure

Accessories

## Customize Your Solution

Let our online wizard help you create a custom kit based on your measurement needs:

- Instruments and Accessories
- AirPro Mobile Feature Sets
- Calibration Contracts

## Learn More

To learn more about AirPro Instruments, please visit [www.tsi.com/AirPro](http://www.tsi.com/AirPro).

AirPro, TSI and the TSI logo are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.

iOS is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

Android is a trademark of Google Inc.



**Knowledge Beyond Measure.**

**TSI Incorporated** - Visit our website [www.tsi.com](http://www.tsi.com) for more information.

<b>USA</b>	Tel: +1 800 874 2811	<b>India</b>	Tel: +91 80 67877200
<b>UK</b>	Tel: +44 149 4 459200	<b>China</b>	Tel: +86 10 8219 7688
<b>France</b>	Tel: +33 1 41 19 21 99	<b>Singapore</b>	Tel: +65 6595 6388
<b>Germany</b>	Tel: +49 241 523030		

P/N 5001873 (A4) Rev C

©2022 TSI Incorporated

Printed in U.S.A.