




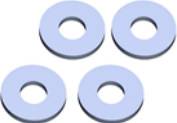

INSTALLING THE TRIPOD MOUNT ONTO DUSTTRAK™ ENVIRONMENTAL MONITORS

INSTALLATION GUIDE

This guide will help you to quickly install the Tripod Mount onto the various DustTrak Environmental monitors.

Unpacking the Kit

1. Unpack the components for the kit and verify that all the items listed in the following table are present.
2. Contact [TSI](https://www.tsi.com) immediately if items are missing or broken.

Qty.	Item Description	Reference Picture
1	Mounting Bracket	
4	Washers	
4	Bolts	

Tools Needed for Installation

- 3/16" ball driver or 3/16" Allen wrench
- 7/16" wrench

Installing the Tripod Mount

1. Using a 3/16" ball driver or 3/16" Allen wrench, remove the 4 socket head cap screws that have already been installed to the bottom of the enclosure on the inside.



2. Lay the instrument on its back.



3. Using a 7/16" wrench, install the tripod mount to the bottom of the enclosure using the 4 bolts and washers (hand tight).



4. Install the instrument onto a surveying tripod. Mount comes with 5/8" - 11 threads to mate with most surveyors tripods.



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA	Tel: +1 800 874 2811	India	Tel: +91 80 67877200
UK	Tel: +44 149 4 459200	China	Tel: +86 10 8219 7688
France	Tel: +33 1 41 19 21 99	Singapore	Tel: +65 6595 6388
Germany	Tel: +49 241 523030		

P/N 6012155 Rev. A

©2018 TSI Incorporated

Printed in U.S.A.

