

CONDENSATION PARTICLE COUNTER MODEL SERIES 3750-CEN

FOR ULTRAFINE PARTICLE MONITORING
COMPLIANT TO CEN/TS 16976:2016

Air quality monitoring of particle number concentrations made easy with a Condensation Particle Counter (CPC). Built on decades of experience with particle counting technologies, the CPC Model 3750-CEN is made for 24/7/365 operation. When complemented with accessories for sampling, temperature and humidity measurement, the resulting system is the cornerstone of your ambient air monitoring station. For hot-spots of ultrafine particles with high concentrations, a diluter is available.



Features and Benefits

- + Compliant with CEN/TS 16976:2016. Model 3750-CEN automatically includes a calibration performed by a facility of the European Center for Aerosol Calibration and Characterization (ECAC), as an independent reference. If desired, the same instrument can be purchased without this calibration included (Model 3750), and the calibration obtained separately
- + Integrate the data into your network directly or export from the software
- + Maximum uptime with auto-recovery from power failure and detailed diagnostics such as monitoring the count pulse height
- + Full-flow CPC design provides optimal counting statistics
- + Minimal maintenance and world-class application support
- + Extended concentration range up to 100,000 particles/cm³ without dilution (for dilution, see 'Accessories')
- + Can be calibrated to have one of two different detection efficiencies:
 - 3750-CEN7: D50 = 7 nm +/- 0,7 nm; D90 < 14 nm [2016 revision of standard]
 - 3750-CEN10: D50 = 10 nm [upcoming revision]

Applications


- + Air quality monitoring for particle number concentration in compliance with CEN/TS 16976
- + Atmospheric monitoring for particle size distribution in compliance with CEN/TS 17434: the 3750-CEN is also used in the Scanning Mobility Particle Sizer (SMPS™) for Ambient Air Monitoring 3938W50-CEN. This SMPS system is compliant with CEN/TS 17434 and monitors the size distribution of ambient ultrafine particles.

Accessories

- + Sampling System for Atmospheric Particles 3750200 (incl. aerosol dryer)
- + Aerosol Diluter 3333-10 provides a 10:1 (± 5%) dilution ratio
- + Relative Humidity and Temperature Sensor RHT3000 provides measurements of those parameters to the CPC; data is stored alongside particle data



UNDERSTANDING, ACCELERATED

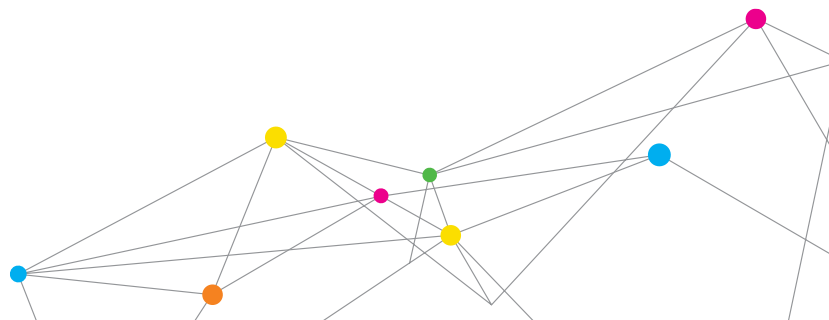

SPECIFICATIONS

CONDENSATION PARTICLE COUNTER MODEL 3750-CEN

Particle Size Range

7 nm min. detectable particle size (D50), verified with monodisperse silver particles at ECAC
Efficiency of 90% at D < 14 nm
> 3 µm max. detectable particle size

Particle Concentration Range

Up to 100,000 (1x10⁵) particles/cm³ in single particle counting mode with continuous live-time coincidence correction

Particle Concentration Accuracy

±5% at <100,000 particles/cm³

False Background Counts

<0.001 particles/cm³ based on 12 hour average

Response Time

Response time (described as percentage of concentration step change)

< 1 second for 90% to 10% (T10-90, T90-10)

~2 seconds for 0 to 95% (T95)

Flow System

1.0 ± 0.05 L/min inlet and counting flow (volumetric)

Requires external pump

Liquid System

Butanol (n-Butyl alcohol, not included) used as working fluid
Internal water removal pump to remove condensate; beneficial in humid environments. Always ensure that aerosol sample is dried in compliance with CEN requirements.

Data Storage

Internal memory lasts for ~ 1 year of data at 50 Hz data rate

Communication Interfaces

Pulse output: BNC connector, TTL level pulse, nominally 350 ns wide
Ethernet port for remote connection: 8-wire RJ-45 jack, 10/100 BASE-T, TCP/IP). Configurable for automated (DHCP) or manual network settings.

USB type C to connect CPC directly to computer (cable included)

USB type B for external memory drives

Embedded touch-display

Specifications reflect typical performance and are subject to change without notice.

TSI and the TSI logo are registered trademarks of TSI Incorporated.



UNDERSTANDING, ACCELERATED

TSI Incorporated - Visit our website www.tsi.com for more information.

USA Tel: +1 800 874 2811
UK Tel: +44 149 4 459200
France Tel: +33 1 41 19 21 99
Germany Tel: +49 241 523030

India Tel: +91 80 67877200
China Tel: +86 10 8219 7688
Singapore Tel: +65 6595 6388

Ambient Operating Conditions

Temperature 10 to 35°C (50 to 95°F)

Humidity 0 to 90% RH, noncondensing

Pressure 75 to 105 kPa (0.75 to 1.05 atm)

Electrical

100 to 240 VAC, 50/60 Hz, 200 W maximum

Accessories

3750200	Sampling System for Atmospheric Particles
3333-10	Aerosol Diluter
RHT3000	Relative Humidity and Temperature Sensor
375X-2LBOTTLE	2 L fill bottle
3032-EC	Vacuum pump (or other vacuum source capable of 60 kPa (18 in Hg) minimum gauge [below atmospheric pressure])
AIM11CPCMONTRIAL	CPC Monitoring Software Trial: permits current TSI customers already using AIM 11 to temporarily access Monitoring-specific software features
AIMCPCMONITORING	Aerosol Instrument Manager (monitoring version)

Dimensions (H x W x D)

27.5 cm x 18.3 cm x 29.9 cm (10.83 in. x 7.21 in. x 11.76 in.), not including fill bottle and bracket

Weight

~6.6 kg (~14.6 lbs)

TO ORDER

Specify	Description
3750-CEN7	Condensation Particle Counter, D50 = 7 nm
3750-CEN10	Condensation Particle Counter, D50 = 10 nm
3032-EC	Vacuum pump 230 V (EU)
3032	Vacuum pump 110V
3750200	Sampling System for Atmospheric Particles
3333-10	Aerosol Diluter 10:1
RHT3000	Aerosol Humidity and Temperature Sensor
AIM11CPCMONITORING	Aerosol Instrument Manager CPC software, monitoring version
3750-MKIT	Maintenance kit for CPC
3750-WKIT	Wick replacement kit for CPC