

MITA MASK ADAPTER KIT MODEL 8125-04




INSTRUCTIONS GUIDE




APPLICABLE MASK MODELS:
C4



Included Accessories

<p>Drink Tube (DT) Valve Adapter</p> <ul style="list-style-type: none">➤ Installed on mask during DT Flow test	
<p>40/74mm Mask Filter Plug (Qty. 1)</p> <ul style="list-style-type: none">➤ Installed on mask during Protection Factor test	
<p>Exhalation Valve (EV) Adapter Connect to Mask Exhalation Valve during EV Leak test</p>	
<p>EV Self Check Zero Fixture</p> <ul style="list-style-type: none">➤ Connect to EV Adapter, during the EV Leak Zero test option of the Self Checks procedure	

Components Installed on Masks

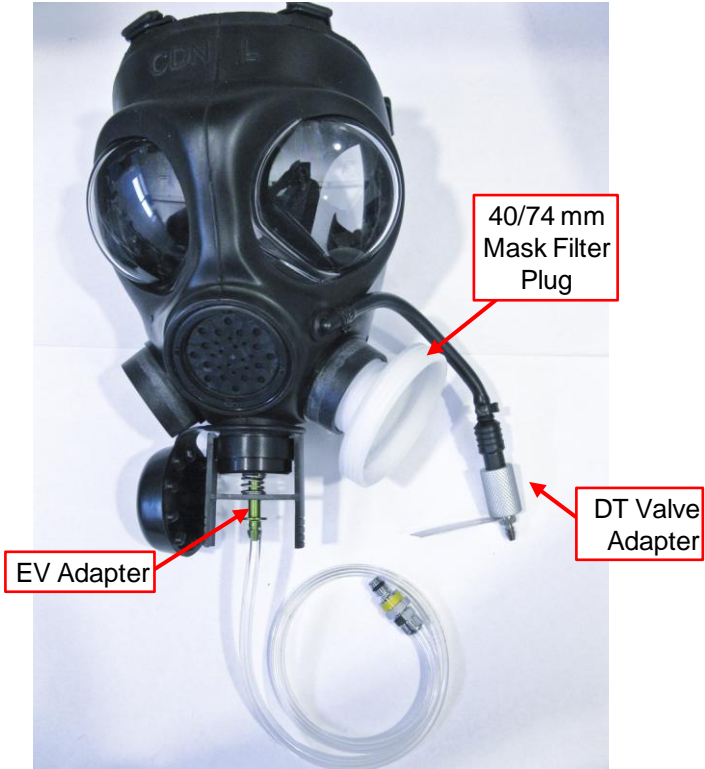

Example of C4



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA **Tel:** +1 800 874 2811
UK **Tel:** +44 149 4 459200
France **Tel:** +33 4 91 11 87 64
Germany **Tel:** +49 241 523030

India **Tel:** +91 80 67877200
China **Tel:** +86 10 8251 6588
Singapore **Tel:** +65 6595 6388