

# SoundPro™ Sound Level Meters

## Series SE/DL




### Adding Options via SanDisk (SD) Memory Card

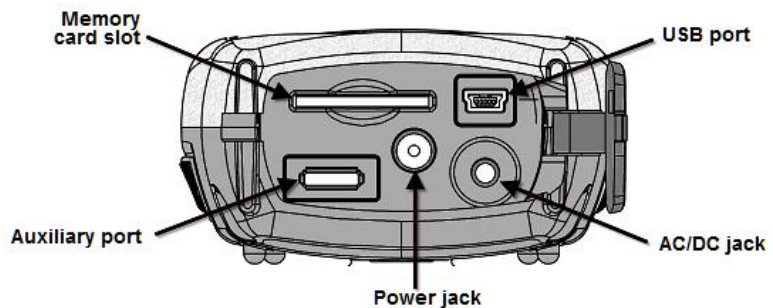
You recently ordered options for your SoundPro™ Sound Level Meter Model SE/DL provided to you on an SD memory card.







#### NOTICE

The options SD card, labeled with a serial number, will only install to the matching serial number on the SoundPro Sound Level Meter Model SE/DL. (The SoundPro™ meter's serial number is located on a back label.)

Follow the steps below to add the Sound Level Meter (SLM) options.




1. Ensure you have the latest firmware version and DMS software.
2. To download the latest SoundPro Sound Level Meter Model SE/DL firmware:
  - Open DMS software.
  - Navigate to SoundPro instrument.
  - Select **Setup**.
  - In the Setup window, select **Options** and click on the **Updates** tab.
  - In the Updates screen select **TSI | Quest** web server.
  - Select the **Update** button (when the SoundPro meter is connected to your computer).
  - Follow screen prompts. At the end, it will state if it was loaded properly.
3. Insert the options SD card provided by TSI® Incorporated, into the **memory card slot** (see diagram).
4. Press  **On/Off/Esc** key to power on the SoundPro Sound Level Meter.



5. To load the options, select the following menu path: **Setup\Options\Load Options**
- From the main screen, select the **Setup** menu via  **Up/Down** arrows and press .
  - Select the **Options** menu via  **Up/Down** arrows and press .
  - Select the **Load Options** menu via  **Up/Down** arrows. When selected, press .

**NOTICE**

It will state, "Options loaded".

6. Press  **On/Off/ESC** key to return to the Start screen.
7. Press and hold  **On/Off/ESC** key to power off the instrument. (This will finalize the SoundPro™ Sound Level Meter Model SE/DL Options install.)
8. Power the SoundPro™ Sound Level Model SE/DL back on to begin using the instrument by pressing  **On/Off/ESC**.

**NOTICE**

To view the installed options, open the Unit Info screen and it will state the model type, serial number of the instrument, the firmware revision number, and any installed features (such as: reverb, curves, STI-PA).

TSI and the TSI logo are registered trademarks of TSI Incorporated in the United States and may be protected under other country's trademark registrations.



TSI Incorporated – Visit our website [www.tsi.com](http://www.tsi.com) for more information.

<b>USA</b>	<b>Tel:</b> +1 800 680 1220	<b>India</b>	<b>Tel:</b> +91 80 67877200
<b>UK</b>	<b>Tel:</b> +44 149 4 459200	<b>China</b>	<b>Tel:</b> +86 10 8219 7688
<b>France</b>	<b>Tel:</b> +33 1 41 19 21 99	<b>Singapore</b>	<b>Tel:</b> +65 6595 6388
<b>Germany</b>	<b>Tel:</b> +49 241 523030		

