

USING HYPERTERMINAL[®] PROGRAM TO COMMUNICATE WITH TSI[®] FLOWMETERS

APPLICATION NOTE FLOW-002

Application Note – April 5, 2001

This application note applies to all TSI flowmeters equipped with a mini-DIN connector.

HyperTerminal[®] is a utility RS-232 communications program that is bundled with most versions of Microsoft[®] Windows[®]. This program can be used to communicate directly with your TSI flowmeter to send RS-232 commands and to capture data from the device.

For common set-up commands, such as changing GAS calibration, changing ANALOG scaling, changing SAMPLING RATE, etc., we recommend using the program “**TSI SETUP**” which can also be downloaded from our web site free of charge. For these common tasks, TSI SETUP is much easier to use than HyperTerminal[®].

<http://flowmeters.tsi.com>

If you need to capture data or if you need to send some special instructions to your flowmeter, you will need to use HyperTerminal[®] or a similar communications program.

COMMAND SET

- For flowmeters equipped with an LCD display, see the RS-232 Serial Command Set manual supplied with your flowmeter for the RS-232 commands. This can also be downloaded from our web site.
- For OEM flowmeters not equipped with an LCD display, see the Design Guide for your device. These can be downloaded from our web site.




Setting up HyperTerminal® to Work with TSI Flowmeters.

Windows® 98 Users: Some versions of HyperTerminal® supplied with Windows® 98 have a bug. It will not echo typed characters even if the “*Echo Typed Characters Locally*” box is checked. You can download an updated version from Hilgraeve (the HyperTerminal supplier) at no cost. The free upgrade is called “HyperTerminal Private Edition”. The upgrade is self-installing and does not upset existing icons or HyperTerminal configuration files.

<http://www.hilgraeve.com>

1. Start the HyperTerminal® program. It is normally located in the Programs | Accessories | Communications section of the START menu
2. You will be prompted for a name and icon for HyperTerminal® program’s setup configuration. Once saved, this configuration can be recalled in future sessions. We suggest a name of “Flowmeter” and an icon of your choice. Click **OK**.

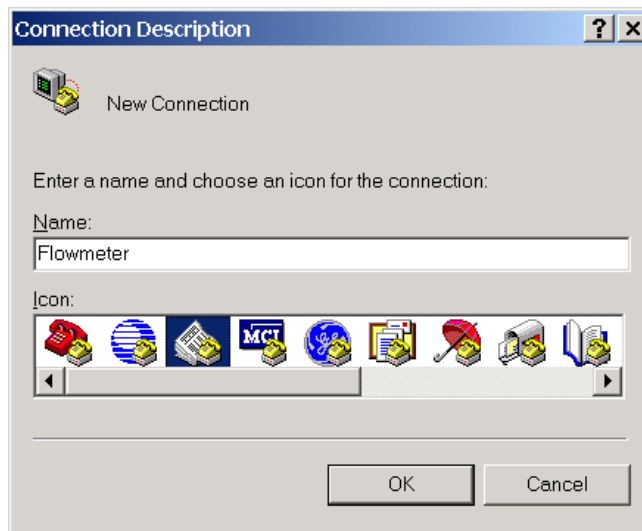


3. Select the desired COM port from the “Connect using” menu. Click **OK**.




4. Select Port settings as shown below. Click **OK**.


Bits per second: 38,400
Data bits: 8
Stop bits: 1
Flow control: None

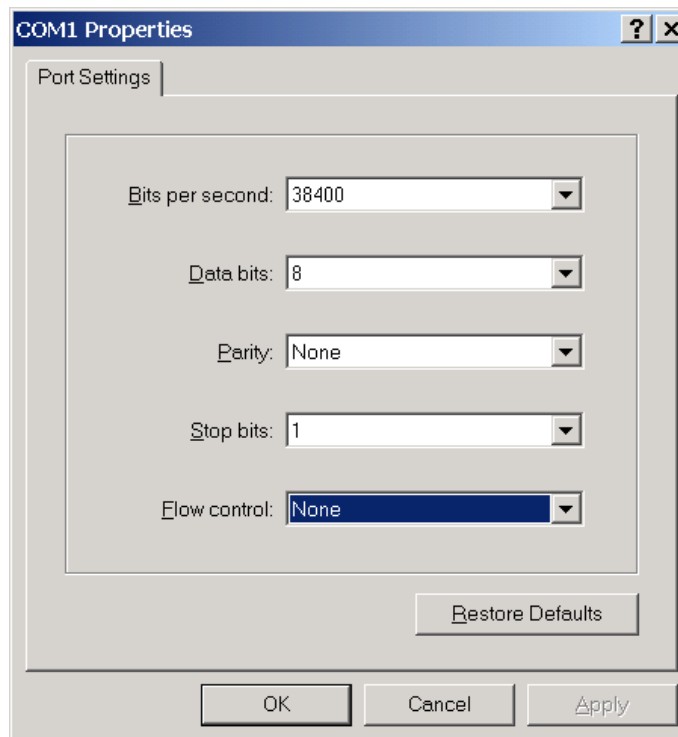

- From the FILE menu at the top of the screen, select **PROPERTIES**. Click on **SETTINGS**. Then click on **ASCII Setup**.

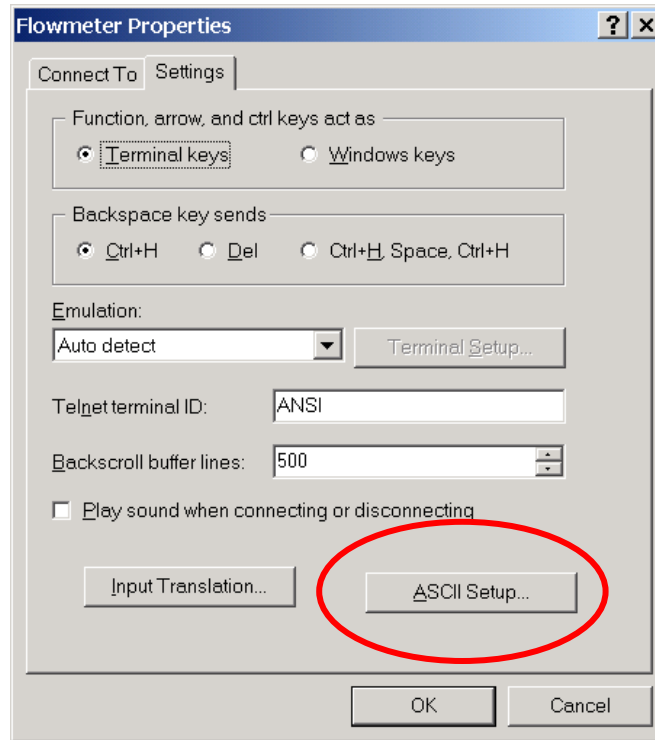

- Make ASCII Setup selections as shown below, then click **OK**.

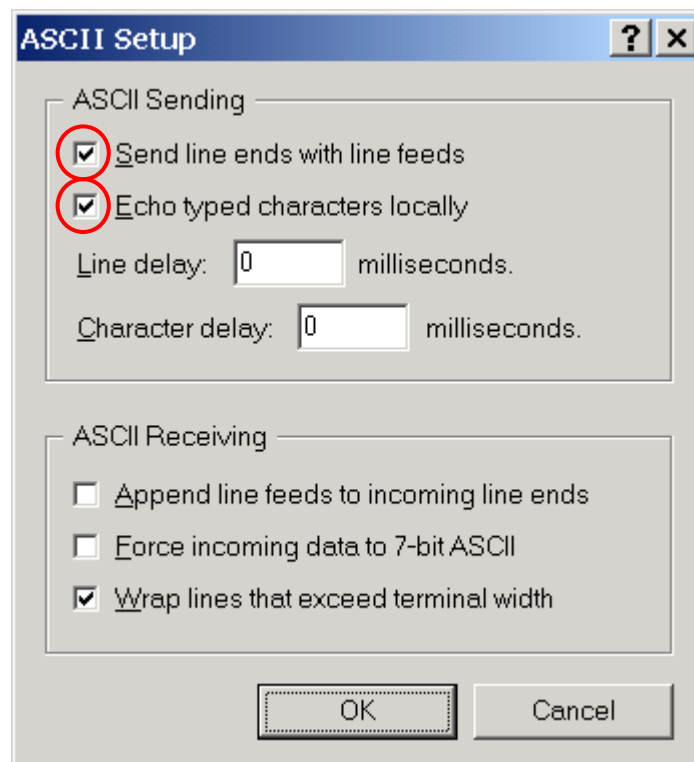

7. Connect the RS-232 connection to your flowmeter and then turn on the flowmeter's power switch. You should now be "live" to the RS-232 connection. Check the connection by sending the PING command:

? <CR> The flowmeter should respond with **OK**.

The flowmeter should be turned on **AFTER** HyperTerminal[®] is set up and **AFTER** the RS-232 cable is connected. If you see problems, turn the flowmeter off and then on again.

8. The screen below shows a few basic commands in a sample session with a TSI model 4140 flowmeter.

Remember that all commands are case-sensitive

```
?
OK
SG1
OK
DCFTP0005
OK
1. 476,23.61,99.18
1. 543,23.59,99.17
1. 597,23.59,99.18
1. 726,23.56,99.17
1. 655,23.53,99.17
DATE
OK
1/2/01
SN
OK
41400048004
```



UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website www.tsi.com for more information.

USA	Tel: +1 800 874 2811	India	Tel: +91 80 67877200
UK	Tel: +44 149 4 459200	China	Tel: +86 10 8251 6588
France	Tel: +33 4 91 11 87 64	Singapore	Tel: +65 6595 6388
Germany	Tel: +49 241 523030		